



# **D2SW IP Phone User Manual**

---

Version: 1.0

2019-02-26

## **Copyright © 2022 ATCOM TECHNOLOGY**

Copyright © 2022 ATCOM Technology CO., LTD. All rights reserved. No parts of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, photocopying, recording or otherwise, for any purpose, without the express written permission of ATCOM Technology CO., LTD. Under the law, reproducing includes translating into another language or format.

### **Caution:**

Change or modifications to this product not expressly approved by ATCOM, or operation of this product in any way other than as detailed by this User Manual, could void your manufacture warranty.

This document is subject to change without notice, if the content of document is difference from the actual IP phone feature, please refer to the actual IP phone.

## Contact ATCOM

### Overview of ATCOM

ATCOM is the leading VoIP hardware manufacturer in global market. We have been keeping innovating with customer's needs oriented, working with partners to establish a total solution for SMB VoIP with IP phone.

With more than ten years of experience in R&D, manufacturing and service in the VoIP industry. ATCOM mission is "creating maximum value for voice over IP applications". We are dedicated to providing competitive IP phones and other IP voice terminals for equipment manufacturers, hosted PBX suppliers and telecoms operators. We offer extremely valuable IP voice solutions to enterprises.

Until now, our VoIP products have been available in 60+ countries and used by millions of end users.

### Contact Sales

Address	Area C, A2F , Block 3 ,Huangguan Technology Park , #21 Tairan 9th Rd, Chegongmiao , Futian District , Shenzhen China
Tel	+ (86) 755-83018618-1
FD2SW(w)	+ (86) 755-83018319
E-mail	<a href="mailto:sales@atcom.com.cn">sales@atcom.com.cn</a>

### Contact Technical Support

Tel	+ (86) 755-83018618-2
E-mail	<a href="mailto:Support@atcom.com.cn">Support@atcom.com.cn</a>

**Website Address:** <http://www.atcom.cn/>

# Content

Contact ATCOM .....	3
1. Overview of D2SW .....	7
1.1. Interface .....	7
1.2. Hardware .....	8
1.3. Software .....	8
1.4. Network .....	9
1.5. Management and Maintenance .....	9
1.6. Protocol .....	9
1.7. Compliant and Certified Standard .....	10
1.8. Packing list .....	10
1.9. Connection .....	10
1.10. Installation .....	12
2. Keypad and GUI .....	15
2.1. Keypad .....	15
2.2. Starting .....	17
2.3. Standby .....	18
3. Call Function .....	20
3.1. Answer the calls .....	20
3.2. Make Calls .....	21
3.3. Multiple line dial-up .....	23
3.4. Call Hold .....	23
3.5. Call Transfer .....	23
3.6. Mute calls .....	24

3.7.	3-Way Conference .....	24
3.8.	Hang up the phone .....	26
3.9.	Voicemail .....	26
4.	Configuration .....	26
4.1.	Guide document .....	27
4.2.	Status info .....	28
4.3.	Multi-Scene .....	30
4.3.1.	Configure the multiple scene from the LCD setting .....	30
4.3.2.	Configure the multiple scene from the Webpage .....	31
4.4.	Call Features .....	32
4.4.1.	Call Forward .....	33
4.4.2.	Call Waiting .....	36
4.4.3.	Auto Answer .....	37
4.4.4.	DSS Keys .....	38
4.4.5.	DND .....	43
4.4.5.	Key as Send .....	45
4.4.6.	Hotline .....	46
4.4.7.	Anonymous Call .....	46
4.5.	Contacts .....	48
4.6.	History .....	54
4.7.	Message .....	57
4.7.1.	Voice Mail .....	57
4.8.	Settings .....	58
4.9.	Display .....	75
5.	Advanced Feature .....	77

5.1. Codecs .....	77
5.2. Capture and Upgrading .....	78
5.3. Auto Provision .....	80
5.4. Export & Import configuration file .....	82
5.4.1. Export configuration file .....	82
5.4.2. Import configuration file .....	83
5.5. Export System log .....	83
5.6. Dial plan .....	84
5.6.1. Replace Rule .....	85
5.6.2. Dial-now .....	86
5.6.3. Area Code .....	87
5.6.4. Block Out .....	88
6. FAQ .....	89
6.1. How to reset to factory .....	91
6.2. Upgrade the firmware on safe mode .....	92
6.3. How to make IP Peer to Peer call .....	92
7. Trouble shooting .....	94
7.1. The phone is failed to register to SIP server .....	94
7.2. The phone is failed to gain IP address .....	94
7.3. Only one party can hear from another on calling .....	94
8. Abbreviation .....	95
9. FCC Caution .....	96

## 1. Overview of D2SW



D2SW

Type	POE	Power adapter	Wi-Fi	100M
D2SW	No	Necessary	Yes	Yes

### 1.1. Interface

<b>Power Input</b>	<b>DC 5V-600mA</b>
<b>LAN Port</b>	RJ45
<b>Headset Jack</b>	RJ9
<b>Handset Jack</b>	RJ9

## 1.2. Hardware

<b>LCD</b>	128*64
<b>CPU</b>	400MHz Dual-Core
<b>LED Indicator</b>	1 Status Light , 2 line indicators

## 1.3. Software

- Sip 2.0 (RFC3261) and other related SIP RFCs
- 6 SIP accounts registration, 2 SIP line keys
- STUN
- Jitter Buffer, VAD,CNG
- G711A, G711U, G722, G726-16, G726-24, G726-32, G726-40, G729, L16, iLBC\_13\_3, iLBC\_15\_2
- Echo Cancellation
- SIP Domain name, Authentication and Backup SIP Server
- DTMF (RFC2833, Inband, SIP INFO)
- Call transfer, Call forward, 3-way conference, Call hold, Call back
- DND(Do Not Disturb), Auto answer, Blacklists, Block Call-ID, Block Anonymous call, Dial plan, IP call
- Phone book with 1000contacts and 50 blacklists
- Call History with 400 records include answered calls, missed calls, dialed calls and forward calls
- Auto update via HTTP, HTTPS, FTP, TFTP, DHCP, RPS and PNP
- Syslog
- SNTP,NTP
- Customized Ringtone
- Daylight Saving time
- OpenVPN, QoS
- 802.1X
- WEB access with different login level
- Soft button: soft button \*4
- Redundancy SIP server



- Multi-language: English, French, Hebrew, Russian, Spanish, Chinese, Persian, Polish, Portuguese, Turkish, German, Italian
- Support Multi-scene feature scenarios
- Support Guide document
- D2SW is signal port IP phone, enabled the Wi-Fi default

## 1.4. Network

- LAN/PC: Support Bridge mode
- Support Open VPN
- Support DHCP, STATIC IP
- Primary/Secondary DNS Server
- Support QoS
- Support LLDP
- Support 802.1X
- Web access via HTTP&HTTPS
- Support 2.4GHz Wi-Fi with 802.11n protocol
- Support the Wi-Fi and Ethernet network change connect automatically

## 1.5. Management and Maintenance

- Support firmware updating under safe mode
- Support different level user management
- Configuration via web , keyboard
- Support multi-language
- Firmware and configuration file auto provision
- Support system log

## 1.6. Protocol

- IEEE 802.3 /802.3 u 10 Base T / 100Base TX
- DHCP: Dynamic Host Configuration Protocol
- SIP RFC3261, RFC3262, RFC3263, RFC3264, RFC3265, RFC2543, RFC3489, RFC3842, RFC3515, RFC2976, RFC3428, RFC2327, RFC2782, RFC1889
- TCP/IP: Transfer Control Protocol/Internet Protocol
- RTP: Real-time Transport Protocol
- RTCP:RTP Control Protocol
- DNS: Domain Name Server
- TFTP: Trivial File Transfer Protocol
- HTTP:Hypertext Transfer Protocol
- FTP:File Transfer Protocol

## 1.7. Compliant and Certified Standard

- CE:
- Comply with ROHS in EU
- Comply with ROHS in China



- 
- Operation temperature: -10 ~ 50° C
- Storage temperature: -10 ~ 50° C
- Humidity: 10 to 90% no dew

## 1.8. Packing list

Model	D2SW
Telephone	1 Unit
Handset	1 Unit
Handset cable	1 Unit
Stand bracket	1 Unit
Power adapter	Standard
Network Cable	1 Unit, 1.5 meters
Quickstart Guide	1 Unit
Headset	Optional

## 1.9. Connection


### 1.9.1. Connect to ethernet Network

D2SW is able to be connected with network via LAN port.




### 1.9.2. Connect WiFi network

D2SW is able to connect the WiFi.

Please press **Menu→Wi-Fi Settings**, select the Wi-Fi SSID and input the password, then press the Connect button, the phone would connect the Wi-Fi and the LCD would show the icon 

The topology is as follows:

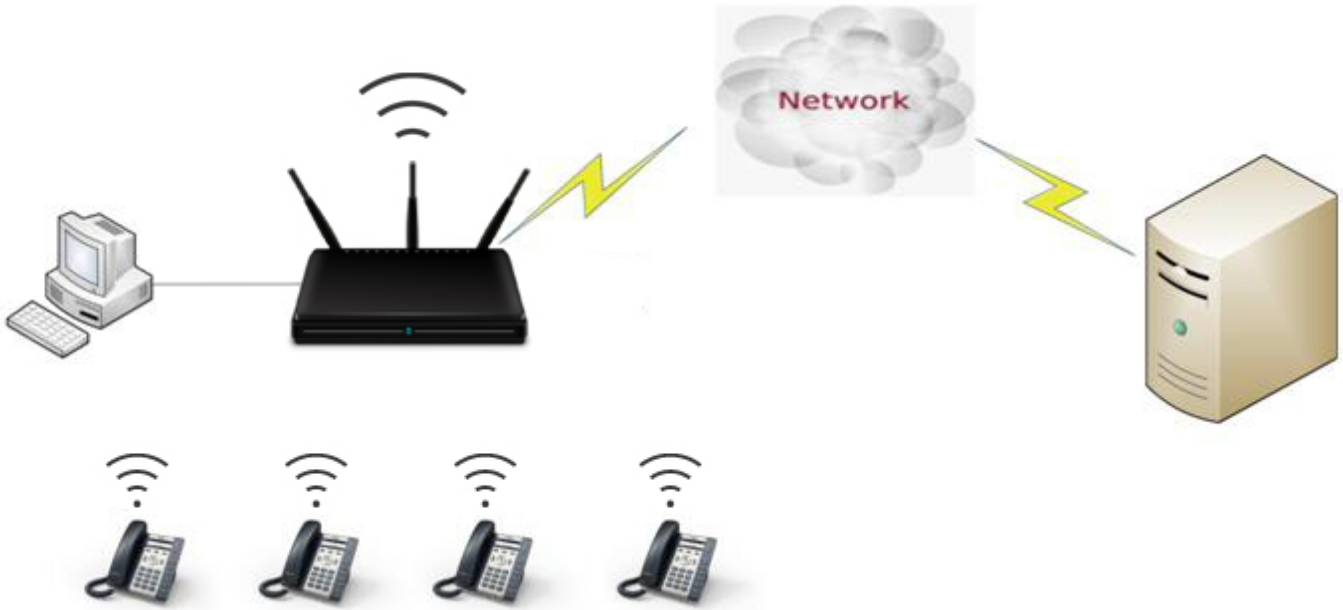


### The phone enabled the Wi-Fi in default:

- 1) After plug into the network cable, the Wi-Fi will disable by automatically. (Noted: if need use the Wi-Fi, please enable the Wi-Fi setting in manual)
- 2) Then the phone plug off the network cable, the Wi-Fi will connected by automatically


## 1.10.Installation

### 1.1. Stand bracket installation instruction

- A. Bottom up the IP phone, press the joints of stand bracket into the slots and push it to the right to fasten:

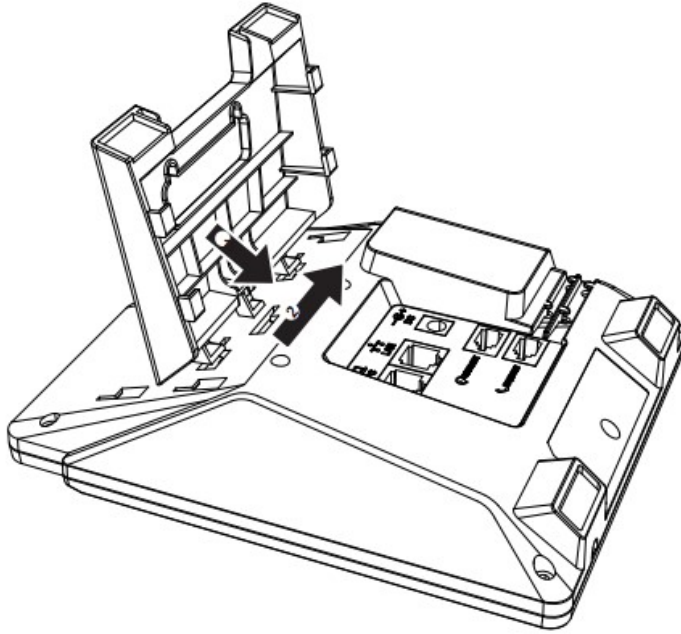


B. After installation, the picture is as below:

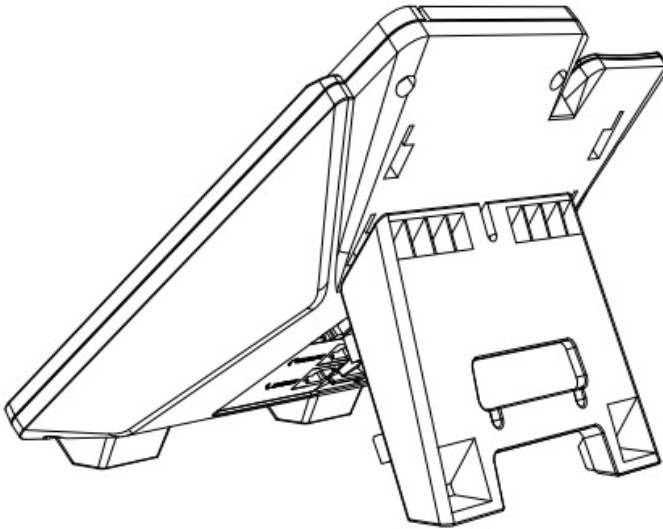


C. Remove the stand bracket:

Push the joint of stand to left and pull the stand according to the direction of the arrow. When the joints are pulled out of the slot, you can take off the stand bracket

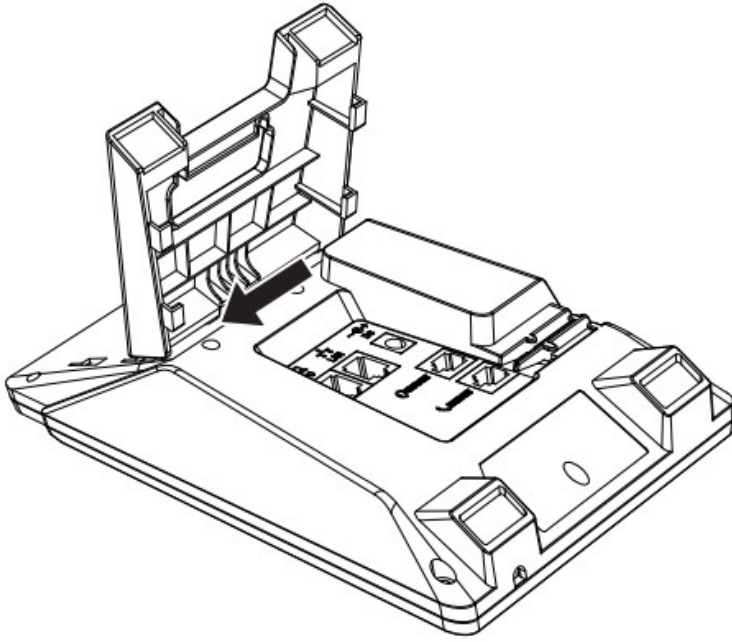


## 1.2. Connecting port introduction

From as below picture show the connecting port:

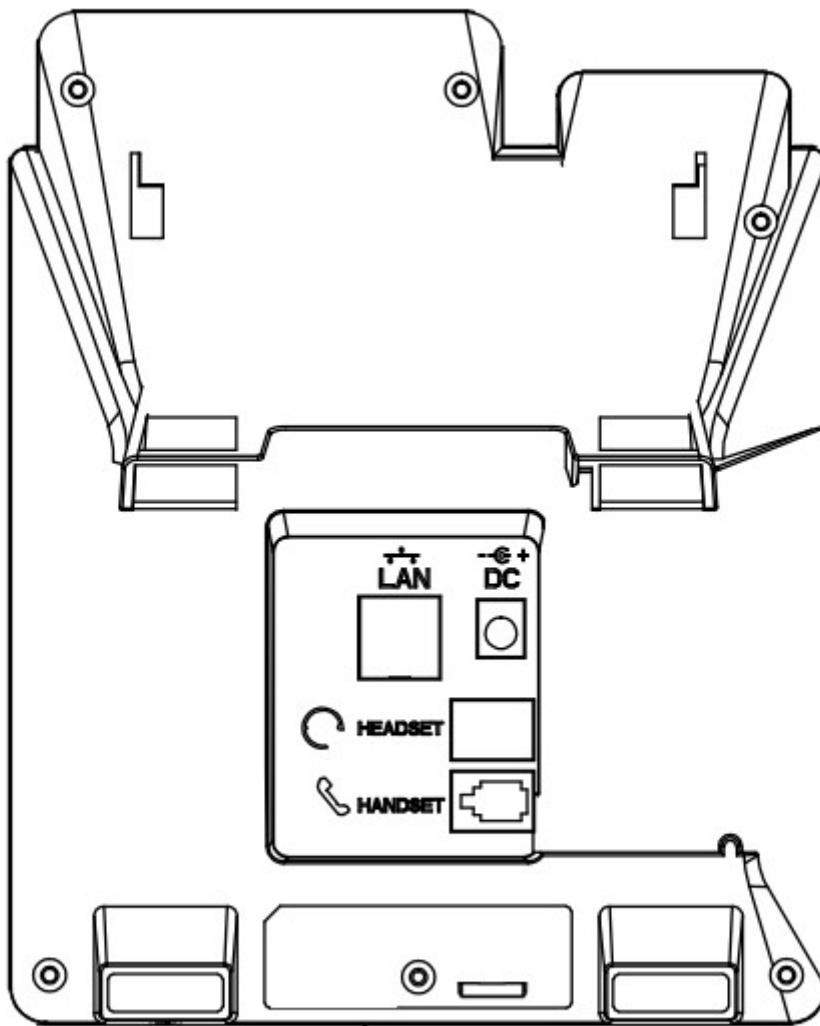





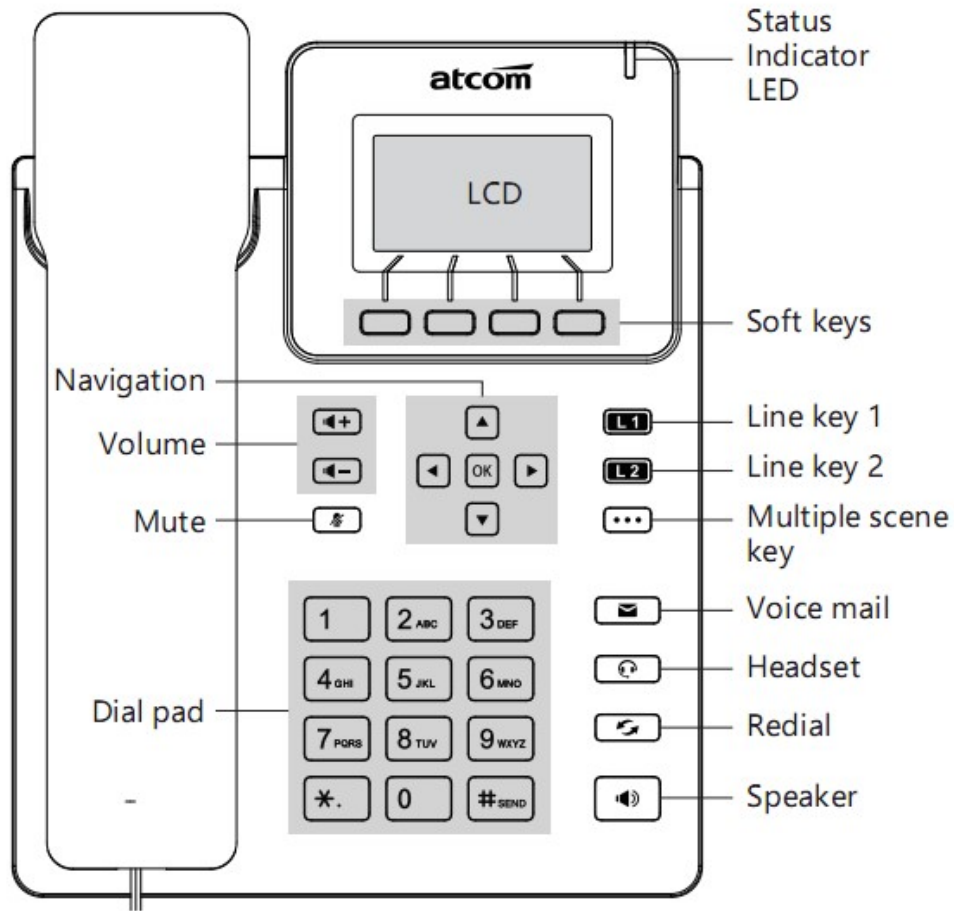






## 2. Keypad and GUI

### 2.1. Keypad


 
<p>Soft Keys</p>	<p>Press to select a function which displayed at the softkey zone of screen</p> <p>Display all optional functions at the last line of LCD screen.</p> <p>It can change the soft keys feature from the multiple scene key.</p>
<p>Status Indicator LED</p>	<p>Indicates the phone's status,</p> <ul style="list-style-type: none"> <li>➤ If the phone is being started ,the LED is on</li> <li>➤ If the phone is standby, the LED is off</li> <li>➤ If there is income calling, the LED will blink at 120ms on, 120ms off.</li> <li>➤ If there is a new message, the LED will blink at 600ms on, 600ms off.</li> </ul>
<p>LCD Screen</p>	<p>All information such as date, time, phone number, incoming caller's ID(if available),line/call status, extension numbers and the soft key features are displayed on it.</p>
<p>Dial pad</p>	<p>Entering numbers or characters.</p>




Navigation keys	Allows users to navigate(left, right, up, down).Press  can enter "Directory". Press  can enter "History".
	Multiple scene key, can change the soft key scene, add the BLF key, the most can change the soft key scenes 3 times, and add 12 BLF programmable keys.
 	Adjust the volume (speaker/handset/headset/ring). Volume level will be displayed on LCD when pressing volume key.
	Confirm users' operation and show status when D2SW is idle.
The fourth soft key	Default Menu key can enter menu settings.
	Pick up and hung up under the speaker mode.
	Mute the mic in a conversation by pressing the Mute button; this prevents the person on the active call from hearing what you or someone else in the room is saying.  To un-mute, press the Mute button again.
	Pick up and hung up under headset mode.
	Check the Voicemail status.
	Redial the last dialed number

## 2.2. Starting


1. When start on the phone, it turns to standby status in about 50 seconds.

# Welcome

2. After absolute boot up (first use or after reset to factory setting), User can select the Language and time manually.

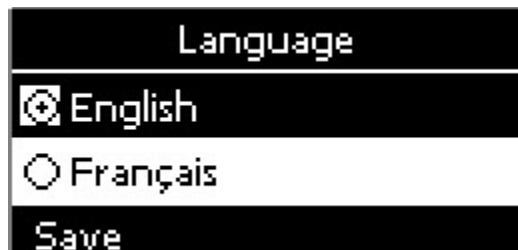



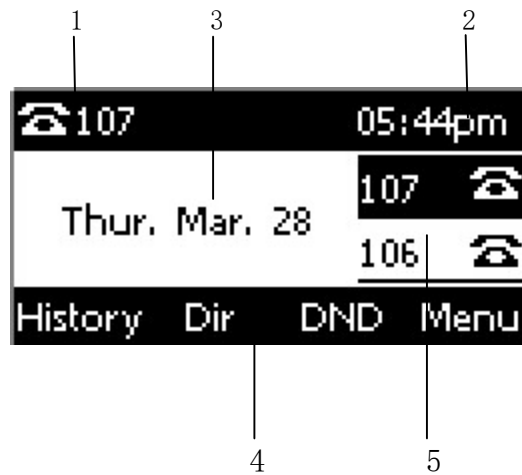


 









## 2.3. Standby



Area Item	Description
1	Show the default account and indicate the call status
2	Show time, the logo of the Wi-Fi, auto answer and forward
3	Date
4	Softkey: "History", "Directory", "DND," "Menu"
5	Line keys

#### Icon on Standby UI

Icon	Description
	The account is registered successfully.
	The account is not registered successfully.
	The line is being occupied for dialing.
	New incoming call

	Call hold.
	Call is talking
	Unavailable Network.
	Calling via handset
	Calling via Speaker.
	Calling via headset.
	Call Forward is activated.
	New Voicemail.
	Auto-Answer is activated.
	DND is activated
	WiFi Signal indicator



## 3. Call Function

### 3.1. Answer the calls




When there is an incoming call, phone will remind user with ringing. There are some ways to answer the call:

#### A. Answer by handset




Pick up the handset and talk with the caller. If you want to hang up, just put back the handset. When you are talking with the handset and want to switch to speaker or headset mode, please

press  key or  key, and then put down the handset.

### B. Answer by speaker

Press  key and talk with callers by built-in Micro-phone and Speaker. If you want to hang up, please press  key again. Switch calling or talking into handset mode by lifting the handset under speaker mode. Press  key will switch calling or talking into headset mode.

### C. Answer by headset

Keep your microphone connected with the RJ9 headset jack, when there is an incoming call, press  and talk with the caller. If you want to hang up, please press  again. Pressing  can change calling or talking into speaker mode, and lifting the handset switches to handset mode.

### D. Answer by line key

If the line key is blink when there is an incoming call, you can press the line key to answer the call.

### E. Answer by soft key


It could show the ringing interface when there is an incoming call, you can press the '**Answer**' key to answer the call.

## 3.2. Make Calls


### A. Use the handset

Pickup the handset, the LCD will show the current account (user is able to switch from account 1 to account 6 by pressing the **up** key or **down** key beside the LCD). Press soft key "**Send**" to dial the number. When you hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.

## B. Use the speaker

Press  key, the LCD will show the current lines (user is able to switch from account 1 to account 6 by pressing the **up** key or **down** key beside the LCD). Input the phone number and press soft key "**Send**" to dial the number. When caller hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.


## C. Use the headset

Press  Key, the LCD will show the current lines (user is able to switch from account 1 to account 6 by pressing the **up** key or **down** key beside the LCD). Input the phone number and press soft key "**Send**" to dial the number. When caller hear the tones of "du~~du~~" and the phone number your dialed is being displayed on the LCD, the phone at the side of being called should be ringing. If the called party answers this calling, the call is established and the calling timer is started immediately.

## D. Use the send key


Input the phone number and press the soft key "**Send**" to dial account.

## E. Dial from phone book

1. Press the **Menu** soft key to enter the menu and choose "**Contact**" option. Press "**Enter**" soft key and then find the contact person by navigation keys. When the certain contact person is highlighted, press "**Dial**" or just pick up the handset to call this number.
2. Pick up the handset, press "**Contact**" soft key, then find the contact person and press "**Dial**" soft key.
3. Pick up the handset, press  and enter "**Contact**", then find the contact person and press "**Dial**" soft key.

## F. Dial from call history



1. Press the '**Meun**' soft key to enter the menu and choose "**History**" option, then select one of call history entry, and press "**Dial**" soft key or pickup the handset to call this number.

2. Pickup the handset, press "**History**" soft key, then select one of call history entry, and press "**Dial**" soft key to call this number.
3. Pickup the handset, press  and enter "**Call History**", then select one of call history entry, and press "**Dial**" soft key to call this number.

### 3.3. Multiple line dial-up

D2SW supports up to 24 concurrent calls. If there is a new incoming call when you're talking on D2SW, the new incoming call will be displayed on LCD and status indicator LED will be fast blinking. User can press soft key "Hold" then press "Answer" to receive the new incoming call.

### 3.4. Call Hold

The current calling will be hold by pressing soft key "**Hold**" or , and the held call will be resumed after pressing soft key "**Resume**" or  or the corresponding line key. Even on 3-way conference calling, the conference will be held after pressing "**Hold**" key, and be resumed to 3-way conference after pressing "**Hold**" Key again. Remember the conversation is still on hold without being ended even if hung up under the status of hold.

### 3.5. Call Transfer

1. Attended call transfer

The attended transfer allows user to call a third-party before transferring the calling.

While calling, press the "**Transfer**" soft key to hold the current call and dial the target number you want to transfer to on the activated line and press "**Send**" soft key to call that number. After the target party answers the call, press "**Transfer**" soft key again to complete the transfer.

If the target number has been setup in the current BLF list, and you have already finished the necessary setup on Webpage of D2SW, there is an easier way to complete the attend transfer. While calling, press the corresponding BLF key of the target number and then press the "**Transfer**" soft key, the attend transfer will be achieved.


## 2. Blind call transfer

The blind transfer allows user to transfer a call without speaking to the third party. On the user side, the call will be ended as soon as the target phone number is dialed.

Operating steps: Press "**Transfer**" soft key to get more option, then press "**Blind**" soft key, input the transfer target number and press "**Send**" soft key.

If the target number has been setup in the current BLF list, and you have already finished the necessary setup on Webpage of D2SW, there is an easier way to complete the Blind transfer. While calling, press the corresponding BLF key of the target number, the blind transfer will be achieved.

## 3.6. Mute calls

The input audio will be not transmitted to peer phone after pressing  key, and the phone will be muted even switched among different modes of speaker, handset and headset.

To un-mute, just press  key again.

## 3.7. 3-Way Conference

1. While on calling, press the soft key "**Conf**", input the 3<sub>rd</sub> party's phone number and then press the softkey "**Dial**" or press the soft key "**Conf**" and press the corresponding BLF key to invite the 3<sub>rd</sub> party to join a conference call.
2. After the third party answers the call, pressing "**Conf**" key again to establish the 3-way conference.





## 1. New call

- 1.1. While on the Conf call, the initiator can press the '**New call**' soft key to dial the call, then press the '**Conf**' soft key join the conf room;
- 1.2. Or when there is a new call incoming, answered the call, and press the 'Conf' soft key, the more can add 3-ways in the conf room.

## 2. Mute

- 2.1. While on the Conf call, the initiator can press the '**Mute**' soft key to forbidden the chosen conf member speak;
- 2.2. After '**Mute**', the initiator can press '**UnMute**' to recover the chosen ways speak.

## 3. More

- 3.1. While on the Conf call, the initiator can press '**More**' soft key to switch the first two keys feature.



## 4. Remove

- 4.1. While on the Conf call, the initiator can press the '**Remove**' soft key to remove the chosen conf member, the remove talking would be end the call.
- 4.2. If all the conf member be removed, the conf call would be ended.

## 5. Hold

- 5.1. While on the Conf call, the initiator can press the '**Hold**' soft key to hold the current conf call, and press the '**Resume**' would recover the call.

## 6. End

- 6.1. While on the Conf call, the initiator press the 'End' key can end the conf call.

## 3.8. Hang up the phone


### 1. Softkey hang up

While on calling, press the softkey "**End Call**" to hang up.


### 2. Handset hang up

Put back the handset at handset mode, the current calling will be hung up.

### 3. Speaker hang up

Press  key at speaker model, the current calling will be hung up.


### 4. Headset Hang up


Press  key at headset model, the current calling will be hung up.

### 5. Hang up one line call

Press the hook to hang up the current calling when 2 calls happened simultaneously.


## 3.9. Voicemail

D2SW has a  key for entering voicemail box and indicating new voicemail. Press

 key to enter the menu to configure voicemail number if you have never configured it previously. Otherwise, the voicemail number will be called after pressing it.

## 4. Configuration

Press the **Menu** soft key to enter the Main Menu:

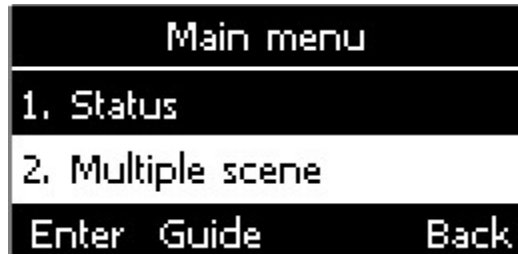

Move the navigation key and press the softkey “**Enter**” or input the corresponding Number key  
Select the item of Main Menu:


Number Key “ <b>1</b> ”	Enter “Status”
Number Key “ <b>2</b> ”	Enter “Multiple scene”
Number Key “ <b>3</b> ”	Enter “Feature”
Number Key “ <b>4</b> ”	Enter “Directory”
Number Key “ <b>5</b> ”	Enter “History”
Number Key “ <b>6</b> ”	Enter “Message”
Number Key “ <b>7</b> ”	Enter “Settings”
Number Key “ <b>8</b> ”	Enter “Display”

#### 4.1. Guide document

Press the ‘Guide’ can enter the Guide help document feature under the main menu, please check as following of photo:





Press the  Down key or the number can enter the corresponding guide feature.

Press number 1	Enter the <b>Introduction for Panel key</b>
Press number 2	Enter the <b>One-click Use</b>
Press number 3	Enter the <b>How to enter the menu</b>
Press number 4	Enter the <b>how to set the customize panel</b> , to introduce how to use the multi-scene feature
Press number 5	Enter the <b>how to use hot desking</b>
Press number 6	Enter the <b>how to make a call</b> feature
Press number 7	Enter the <b>how to answer the call</b> feature
Press number 8	Enter the <b>how to transfer the call</b> feature
Press number 9	Enter the <b>how to build the phone multi-conference</b> feature
Press number 10	Enter the <b>Cautions</b>

## 4.2. Status info


It's able to check the status info via LCD Display or Web.


And the basic status and details status will be optional displayed on LCD display

1. Basic Status——IP address.MAC address. Firmware version。
2. Details Status——Network info. Production info and Account info in details.

### Basic Status


You're able to check the basic status in both ways as below:

1. Press the key  on standby.
2. Press the Menu soft key and select the "Status" of Main Menu.
3. Move the navigation key, the status display the Model, IP, MAC, Firmware, More

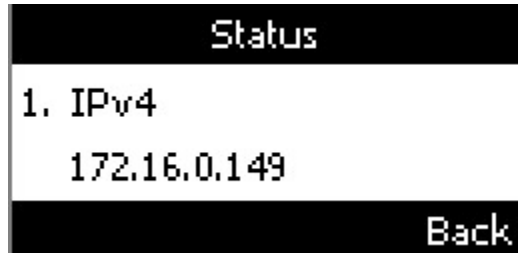

## Details Status

Select "**More**" and then press the softkey "**Enter**" to check details info, and move the navigation key to check more.

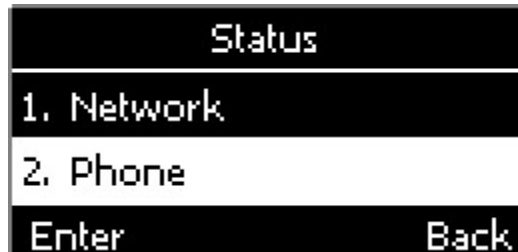


Press the softkey "**Enter**" to check status info, and "**Back**" to return the Basis Status page.


## Check the Status info via Web

1. Check the IP address of IP phone;
2. Type the IP address on a web browser;

3. Input the username and password, the default user and password for Administrator is (admin, admin), for general user is (user, user), and then press "**Enter**".
4. By default, the Status info will be displayed.

### 4.3. Multi-Scene

Press the  multiple scene key can switch to other softkey mode, and the default scene softkey feature is BLF.


in our default setting you can press the  scene key change 1 softkey scene, User can add more softkey scenes from the web and LCD setting, the most can switch 4 different softkey scenes and configure 16 BLF keys.

Under multi-scene softkey mode, user can long press the softkey to configure the BLF key.

When the BLF account is ringing or talking, the BLF light status would be change.

#### 4.3.1. Configure the multiple scene from the LCD setting

1. Please press the **Menu** key.
2. Enter to the **Multiple Scene** .User can choose Enabled or Disabled the multiple scene feature.

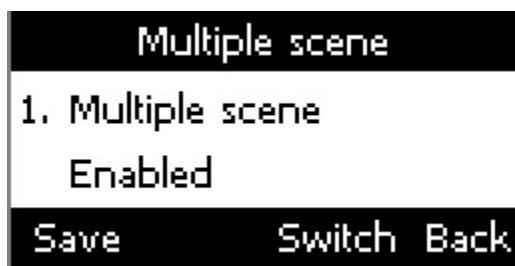


- When under the **Multiple scene**, you can press **the down** key enter to the **Scene settings**, then user can enable the **Scene1**, **Scene2** or **Scene3**.

Only **Scene1** is enabled as default.



- Enter to the **Scene1** interface, press **the down** key, user can configure the blf account or switch to another programmable feature.

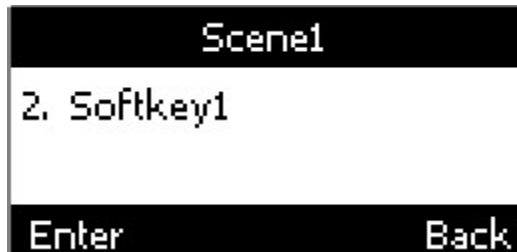

#### 4.3.2. Configure the multiple scene from the Webpage

Via web: **DSS keys**→**Multiple scenario**

You can see the factory softkey mode is default scene,

And you can choose **Enabled** or **Disabled** to add the scenes, can add 3 multiple scenes in total.

Basic   Account   Network   **DSS Keys**   Phone   Contacts

Line Keys

Programmable Keys

**Multiple Scenario**

**Multiple Scenario** Enabled ▾

Scenario 1

Name

Default Scenario

Add To Scan List Enabled ▾

Key	Type	Value	Label	Account
SoftKey1	History ▾	<input type="text"/>	<input type="text"/>	Auto ▾
SoftKey2	Directory ▾	<input type="text"/>	<input type="text"/>	Auto ▾
SoftKey3	Forward ▾	<input type="text"/>	<input type="text"/>	Auto ▾
SoftKey4	Do Not Disturb ▾	<input type="text"/>	<input type="text"/>	Auto ▾

Scenario 2

Name

Default Scenario

Add To Scan List Enabled ▾

Key	Type	Value	Label	Account
SoftKey1	BLF ▾	<input type="text"/>	<input type="text"/>	Account 1 ▾
SoftKey2	BLF ▾	<input type="text"/>	<input type="text"/>	Account 1 ▾
SoftKey3	BLF ▾	<input type="text"/>	<input type="text"/>	Account 1 ▾
SoftKey4	BLF ▾	<input type="text"/>	<input type="text"/>	Account 1 ▾

## 4.4. Call Features

In this part, we will introduce the following content:

- [Call Forward](#)
- [Call Waiting](#)
- [Auto Answer](#)
- [DND](#)
- [DSS Keys](#)
- [Key as send](#)
- [Hotline](#)




- [Anonymous Calls](#)

#### 4.4.1. Call Forward


“Call Forward” includes “Always Forward”, “Busy Forward”, “No Answer Forward”.



“Always Forward” has the highest priority, and “Busy Forward” has the same priority as “No Answer Forward”, that means once the function of “Always Forward” is activated, other call forward features will be unavailable.

Any type of Call forward feature is activated, the Icon  will be indicated on the LCD Display.

#### Always Forward

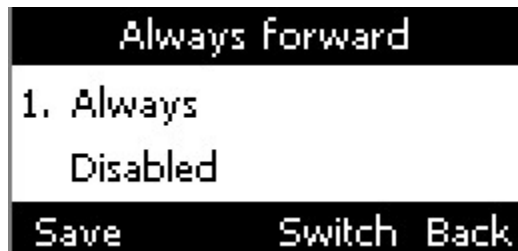All incoming calls will be forwarded to target phone number once the “**Always Forward**” activated, setup this feature as follow and please move the navigation to check more:






Item	Operation	Description
<b>Always</b>	Press the key   or the soft key “ <b>Switch</b> ” to setup	Switch on or Switch off the feature. “ <b>Enable</b> ” mean this feature is enabled, “ <b>Disable</b> ” mean this feature is disabled.
<b>Forward to</b>	The Number key, “*”key, and “#”are permitted to be input.	Setup the target phone number which all incoming calls transferred to
<b>On Code</b>	The Number key, “*” key, and “#”are permitted to be input.	The feature code to enable all incoming calls forward, the phone will send the feature code directly to open all incoming calls forward
<b>Off Code</b>	The Number key, “*” key, and “#”are permitted to be input.	The feature code to disable all incoming calls forward, the phone will send the feature code to close all incoming calls

		forward directly
--	--	------------------

## Busy Forward

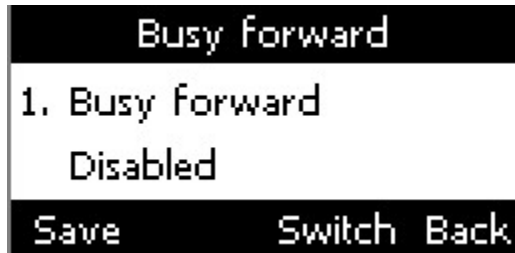
It means the phone is busy once the phone is not at standby mode. Setup this feature as below:







Item	Operation	Description
<b>Busy</b>	Press the key   or softkey "Switch" to setup	Switch on or Switch off the feature. "Enable" mean this feature is enabled, "Disable" mean this feature is disabled.
<b>Forward to</b>	The Number key, "*" key, and "#" are permitted to be input.	Setup the target phone number which all incoming calls transferred to
<b>On Code</b>	The Number key, "*" key, and "#" are permitted to be input.	The feature code to enable busy calls forward, the phone will send the feature code directly to open busy call forward
<b>Off Code</b>	The Number key, "*" key, and "#" are permitted to be input.	The feature code to disable busy calls forward, the phone will send the feature code directly to close busy call forward
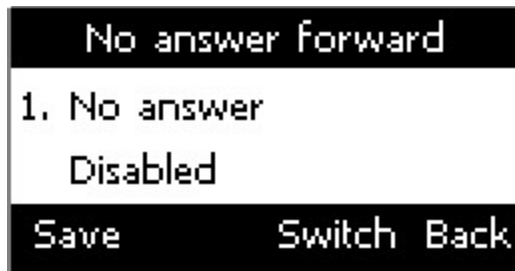
## No Answer Forward

All incoming calls will be forwarded after time out, once the feature of "No Answer Forward" is activated. Setup this feature as below, and please move the navigation key to check more:



Item	Operation	Description
<b>No Answer</b>	Press the key   or softkey " <b>Switch</b> " to setup	Switch on or Switch off the feature. "On" mean this feature is activated, "Off" mean this feature is unactivated .
<b>Forward to</b>	The Number key, "*" key, and "#" are permitted to be input.	Setup the target phone number which all incoming calls transferred to
<b>After Ring Time</b>	Press the key   or softkey " <b>Switch</b> " to setup	Setup timer for no answer status. All incoming calls will be forwarded after time out once Call forward when no answer activated.
<b>On Code</b>	The Number key, "*" key, and "#" are permitted to be input.	The feature code to enable no answer call forward, the phone will send the feature code directly to open all incoming calls forward
<b>Off Code</b>	The Number key, "*" key, and "#" are permitted to be input.	The feature code to disable all incoming calls forward, the phone will send the feature code directly to close all incoming calls forward

## Setup Call Forward Via Web

Set Call Forward via web: **Phone**→**Forward&DND**→**Call Forward**

User can choose two forward mode:

### 1. Phone

If choose Phone mode, after configure call forward feature, it is used for all the phone accounts.

### 2. Custom

If choose custom mode, user can configure each or all accounts call forward feature, and this is our default mode.

Notes: after enable the emergency feature, you can input the **Authorized accounts** that it could not effective by the call forward feature.


Basic
Account
Network
DSS Keys
Phone
Contacts





<b>Forward&amp;DND</b>		
Preferences		
Features		
Upgrade		
Auto Provision		
Configuration		
Remote Control		
Action URL		
Power LED		
Tones		
SMS		
Dial Plan		
Voice		
Phone Lock		

<b>Call Forward</b>		
Emergency	<input type="text" value="Enabled"/>	▼
Authorized Numbers	<input type="text"/>	
Mode	<input type="radio"/> Phone <input checked="" type="radio"/> Custom	
Account	<input type="text" value="151"/>	
<b>Always</b>		
Target	<input type="text"/>	
On Code	<input type="text"/>	
Off Code	<input type="text"/>	
<b>When Busy</b>		
Target	<input type="text"/>	
On Code	<input type="text"/>	
Off Code	<input type="text"/>	
<b>When No Answer</b>		
After Ring Time (s)	<input type="text" value="12"/>	
Target	<input type="text"/>	
On Code	<input type="text"/>	
Off Code	<input type="text"/>	
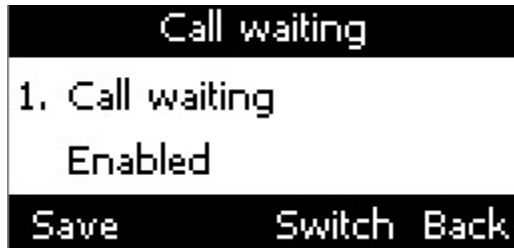
### 4.4.2. Call Waiting

The feature of “Call Waiting” is available by default. If switch off this feature, whatever multiple SIP accounts had been registered successfully, only one single active calling is permitted (for example Dialing, Ringing, Calling, Holding).



Item	Operation	Description
<b>Call Waiting</b>	Press the key   or softkey " <b>Switch</b> " to setup	Switch on or Switch off the feature. " <b>Enable</b> " mean this feature is enabled, " <b>Disable</b> " mean this feature is disabled.
<b>Call Waiting Tone</b>	Press the key   or softkey " <b>Switch</b> " to setup	Switch on or Switch off the prompt playing. " <b>Enable</b> " mean this feature is enabled, " <b>Disable</b> " mean this feature is disabled .


Setup call waiting via web: "Phone" → "Feature" → "General information" → "Call Waiting".


Setup call waiting Tone via web: "Phone" → "Feature" → "Audio Settings" → "Call Waiting Tone".

#### 4.4.3. Auto Answer

The feature of "Auto Answer" is switched off by default. All incoming calls will be answered automatically when the phone is standby once "Auto Answer" is activated. "Auto Answer" when the phone is under "on Calling" status.

Please move the navigation key to check more:

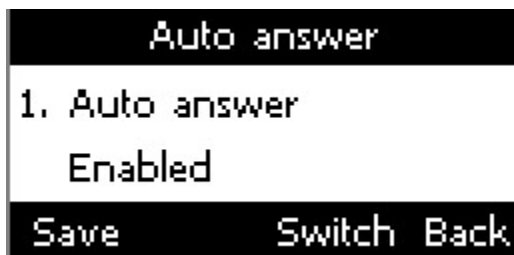

The Icon  will be indicated once "Auto Answer" is available.

Setup "Auto Answer" via Web: **"Phone" → "Feature" → "General information" → "Auto Answer"**

#### 4.4.4. DSS Keys

The programmable keys include Line keys, Memory keys (aside the BLF LCD Display), Programmable keys and Soft keys on Standby UI.

Press the memory key for 2 seconds, it is able to modify the feature of each programmable key.

All programmable keys has been classified as "N/A", "Line Key", "BLF", "Key event", "Speed dial", "Intercom"

And the "Key Event" has been classified as "Conference", "Hold" "DND", "Redial", "Call return", "Pickup", "Call Park", "DTMF", "Directory".


Comments:



**N/A**

N/A means this key is not permitted to be set as a programmable key.

#### Line key

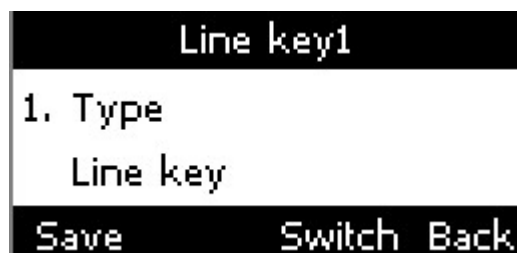
Display the account information, press it for making a call, answering incoming calls, call hold and resume.





Item	Description
<b>Account ID</b>	To display the account ID, press the soft key " <b>Switch</b> " or  ,  to modify, the optional value is Account 1 to 6.
<b>Account name</b>	Display the account name of each account ID, non-modifiable.
<b>SIP Server</b>	The SIP server of each Account ID, non-modifiable. If not set any value for some account ID, the account name will be null.

## BLF

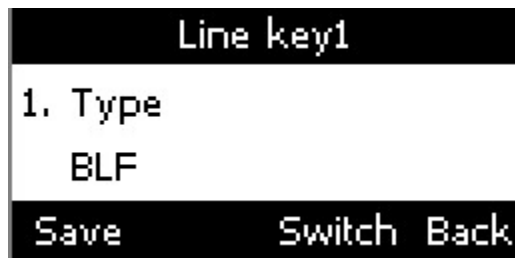Indicate the status of monitored account. Once set the BLF key with Pickup feature, user is able to answer the incoming call to the monitored account by pressing the corresponding BLF key. If the monitored account is idle, press the corresponding BLF key for speed dial.




Item	Description
<b>Account ID</b>	To display the account ID, press the soft key " <b>Switch</b> " or  ,  to modify, the optional value is Account 1 to 6.
<b>Label</b>	To identify this key on LED, for example "blf"
<b>Value</b>	The phone number will be monitored by this key. For example, if user want to monitor the phone number (5003), please set "6070" here.
<b>Extension</b>	This code must be configured for pickup, and this code provide by Server. If the code is not matched by Server, the feature of pickup will not work.

## Conference

The 3-way conference will be setup by pressing the key "Conf" while on calling. For more info, please refer to [Chapter 3.8](#).

The configuration item **Label** is a name to identify the key on LED, can be set as "conference".

## Hold

The same feature as the key . For more info, please refer to [Chapter 3.5](#).


The configuration item **Label** is a name to identify the key on LED, can be set as "hold".

## DND

Press this key will switch on or switch off the feature of "DND".

The configuration item **Label** is a name to identify the key on LED, can be set as "DND".

## Redial

The same feature as the key .

The configuration item **Label** is a name to identify the key on LED, can be set as "redial".

## Call return

Automatically dial the latest phone number in history.

The configuration item **Label** is a name to identify the key on LED, can be set as "return".

## Call Pickup

Press this key to pick up if new incoming call to the monitored phone number.



Item	Description
<b>Value</b>	The phone number monitored for pickup
<b>Label</b>	D2SW cannot definition label

Reminding: This code must be set for pickup, and this code can be set via Web only.

Set the Pickup code as follow:

Set the pickup code for one single Account: **Account**→**Advanced**→**Select an account to be configured**→**Directed Call Pickup Code**.

Set the pickup code for all Accounts: **Phone**→**Features**→**Call Pickup**→**Direct Call Pickup**. **Direct Call Pickup Code (Direct Call Pickup should be set as Enable)** .

### Call Park

Press this key while on calling, the phone will dial the specified phone number, user will receive a code on the phone prompt, and then press the soft key "Transfer", the current calling will be parked successfully. At this moment, user is able to continue the parked calling with any other phones which registered on the same SIP server by dialing the code which user have received.

Item	Description
<b>Value</b>	The code for pickup the parked call and it is provided by SIP server.
<b>Label</b>	D2SW cannot definition label

### DTMF

Press this key while on calling, the phone will send the configured "**Value**" automatically.

Item	Description
<b>Value</b>	The value sent to remote end while on calling.
<b>Label</b>	D2SW cannot definition label

## Directory

Press this key to access Directory.

## Speed Dial

Press this key while standby state, the specified target phone number will be dial from the specified account.


Item	Description
Value	The target phone number for speed dial
Label	D2SW cannot definition label

## Intercom

Press this key when the phone is idle, the phone will dial the specified "Value", and there mote end will answer the call automatically.


Note: This feature is supported by specified servers only.

Item	Description
Value	The target phone number for Intercom
Label	D2SW cannot definition label

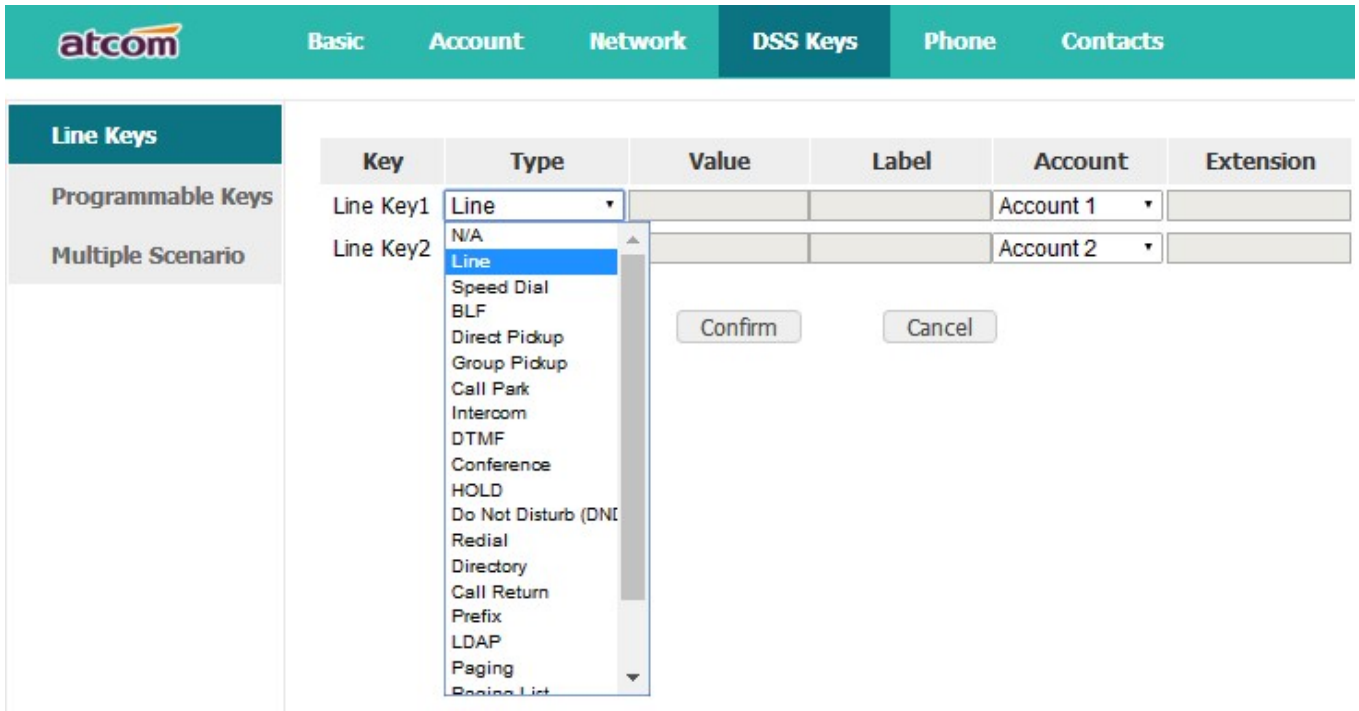

#### 4.4.5. DND

The phone enabled the DND(Do not disturb) feature, the phone reject all the incoming call, and the phone would show icon. IP phone receive an incoming invite message and responding 480 temporarily unavailable.

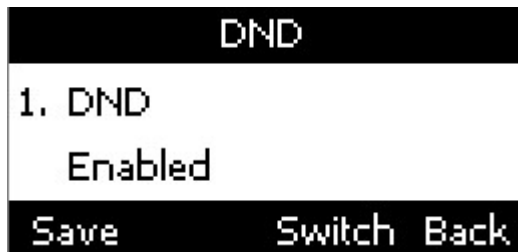

Item	Operation	Description
<b>DND</b>	Press the key   or softkey "Switch" to setup	Switch on or Switch off the feature. "Enable" mean this feature is enabled, "Disable" mean this feature is disabled.
<b>On Code</b>	The Number key, "*" key, and "#" are permitted to be input.	The feature code to enable busy calls forward, the phone will send the feature code directly to open busy call forward
<b>Off Code</b>	The Number key, "*" key, and "#" are permitted to be input.	The feature code to disable busy calls forward, the phone will send the feature code directly to close busy call forward

## Setup DND feature Via Web

Set DND via web: **Phone**→**Forward&DND**→**DND**

User can choose DND mode:

### 1. **Phone**

If choose Phone mode, once enable the DND feature, it is used for all the phone accounts.

### 2. **Custom**

If choose custom mode, user can configure each or all accounts call forward feature, and this is our default mode.

Notes: after enable the emergency feature, you can input the **Authorized accounts** that it could not effective by the DND.

**atcom**
Basic   Account   Network   DSS Keys   **Phone**   Contacts

Forward&DND

- Preferences
- Features
- Upgrade
- Auto Provision
- Configuration
- Remote Control
- Action URL
- Power LED
- Tones
- SMS
- Dial Plan
- Voice
- Phone Lock
- Ring
- TR069
- Security
- Debug
- Trusted Certificates
- Server Certificates

Call Forward

Emergency	Enabled	▼
Authorized Numbers	<input type="text"/>	
Mode	<input type="radio"/> Phone <input checked="" type="radio"/> Custom	
Account	151	▼
<b>Always</b>		
	Off	▼
Target	<input type="text"/>	?
On Code	<input type="text"/>	?
Off Code	<input type="text"/>	?
<b>When Busy</b>		
	Off	▼
Target	<input type="text"/>	?
On Code	<input type="text"/>	?
Off Code	<input type="text"/>	?
<b>When No Answer</b>		
	12	▼
After Ring Time (s)		?
Target	<input type="text"/>	?
On Code	<input type="text"/>	?
Off Code	<input type="text"/>	?
<b>DND</b>		
Emergency	Enabled	▼
Authorized Numbers	<input type="text"/>	
Mode	<input type="radio"/> Phone <input checked="" type="radio"/> Custom	
Account	151	▼
DND Status	<input type="radio"/> On <input checked="" type="radio"/> Off	
DND On Code	<input type="text"/>	?
DND Off Code	<input type="text"/>	?

### 4.4.5. Key as Send

The key "Key as Send" has the same function as the soft key "Dial".

Reminding: This key is not available while pre-dial. It's the only way to press the soft key "Dial" or pickup the handset to finish pre-dial.

The default value is "#", and it could be set as "\*". If set the value as "disable", it means the function "Key as Send" is forbidden.

Set "Key as Send" via web : **Phone→Features→General Information→Key As Send.**

#### 4.4.6. Hotline

Once "Hotline" has been set, the phone will automatically dial the hotline via the 1st available line if the phone stay in the standby status exceed the specified waiting time and there is no input (or input something and then all deleted).

Hotline	
1. Hotline	10000
2. Hotline timeout	4

Save    123    Delete    Back

Item	Description
<b>Hotline</b>	Set up the hotline number, the value is null by default.
<b>Hotline timeout</b>	Set up the timeout for hotline activation, 4 seconds by default.


Set hotline via web: **Phone→Features→General Information→Hotline.**

Set Hotline Time-out(secs) via web: **Phone→Features→General Information→Hotline Time-out(secs).**


#### 4.4.7. Anonymous Call





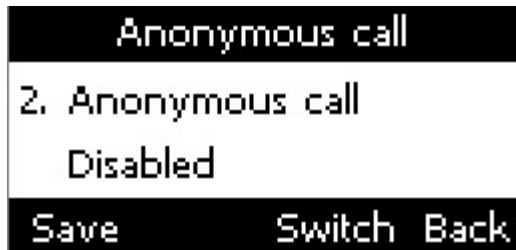

This function includes making anonymous calls and blocking all anonymous calls.

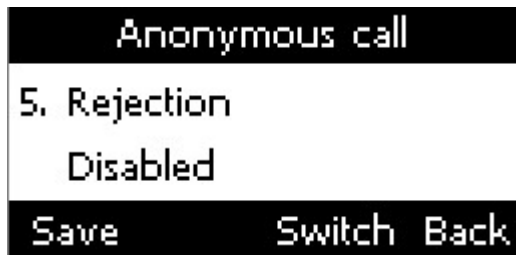If switch on the feature "Anonymous call", all outgoing calls will be displayed as anonymous call in the other side.



If switch on the feature "Rejection", all incoming anonymous calls will be blocked automatically.



Item	Operation	Description
<b>Accounts</b>	press the soft key "Switch" or   to modify,	Select the Account for anonymous call.
<b>Anonymous Call</b>	press the soft key "Switch" or   to modify,	Switch on/off the feature of making anonymous calls.
<b>Call On Code</b>	The Number key, "*" key, and "#" are permitted to be input.	Set the feature code to turning on anonymous call, the phone enables anonymous call by sending the feature code to the server
<b>Call Off Code</b>	The Number key, "*" key, and "#" are permitted to be input.	Set the feature code to turning off anonymous call, the phone disables anonymous call by sending the feature code to the server
<b>Rejection</b>	press the soft key "Switch" or   to modify	Switch on/off the feature of blocking anonymous calls.
<b>Reject On Code</b>	The Number key, "*" key, and "#" are permitted to be input.	Set the feature code to turning on anonymous call rejection, the phone enables anonymous call rejection by sending the feature

		code to the server
<b>Reject Off Code</b>	The Number key, “*” key, and “#” are permitted to be input.	Set the feature code to turning off anonymous call rejection, the phone disables anonymous call rejection by sending the feature code to the server

Set Anonymous Call via web: **Account**→**Basic**→**Select the Account**→**Anonymous Call**.

Set Anonymous Call Rejection via web: **Account**→**Basic**→**Select the Account**→**Anonymous Call Rejection**.

## 4.5. Contacts

The content of Directory includes local phonebook and blacklist. Enter Directory as follow,

1. Press the soft key “Contacts” when the phone is standby
2. Press the navigation key 
3. Press the menu softkey, and then select “Contacts”

Configure the “Contacts” via Web:



atcom					
Basic		Account		Network	
DSS Keys		Phone		Contacts	

Contacts					
Contacts					Black List
Index	Name	Office Number	Mobile Number	Other Number	<input type="checkbox"/>
					<input type="button" value="Save"/> <input type="button" value="Delete"/> <input type="button" value="Move to Black List"/>
Contacts					
* Name	<input type="text"/>				
Office Number	<input type="text"/>				
Mobile Number	<input type="text"/>				
Other Number	<input type="text"/>				
Ring	Auto <input type="button" value="v"/>				
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Search"/>					
Import and Export Local Contacts					
Import Local Contacts					<input type="button" value="Browse..."/>
<input type="button" value="Import"/> <input type="button" value="Export"/>					

All operations on Directory via Web will be not active until click "Save". When too much item existed in the Directory, it will be an easy way to search by keyword about name, Office Number, Mobile Number or other Number. The exactly matched item will be listed, otherwise you will be prompted "Not find the specified contact".

## Local Contacts



Name and phone number are permitted to be saved into the local phonebook, and up to 1000 items. It's able to add new group, new contact, edit or delete exist contact or dial, also move the item to blacklist.

## Make calls from directory

Path to set on the phone: Press **Menu** key→**Contacts**→**Local Contacts**→**All contact**→**Select the record**→**Dial**。



If only one phone number saved with the selected contact person, the phone number will be dialed while calling the contact person.

If multiple phone numbers saved with the selected contact person, user must select one of the phone numbers for dialing while calling the contact person.

### Add new contact

Path to add new contact on the phone: **Press Menu key**→**Contacts**→**Local Contacts**→**All contact**→**Add**。




Item	Operation	Description
<b>Name</b>	Input by number keys, "*" or "#" key, change the input-method via pressing the soft key "abc"	It's used to identify different phone numbers. Any reduplicated names are not permitted in the contacts.
<b>Office</b>	Input by number keys, "*" or "#" key, change the input-method via pressing the soft key "abc"	You can save three numbers at most. While calling a contact person in contacts, the phone will redirect to the page that to select one number to dial when multiple numbers are saved for one contact record
<b>Mobile</b>		
<b>Other</b>		
<b>Ring</b>	Press the key   or the soft key "Switch" to modify the account ID.	It's used to bundle each item with the corresponding ringtone, and the optional value is "Auto" or "Ringtone 1" to "Ringtone 10". "Auto" means the default ringtone will be played if new incoming call happened, otherwise the selected ringtone will be played.

Add new contact via web: **Contacts**→ **Contacts**→**Input messages**→**Add**→**Save**.

## Edit the contact

User must re-edit the contact item while updating one item of local phonebook.

Path to edit the contact on the phone: **Press Menu key**→**Contacts**→**Local Contacts**→**All contacts**→ **Select the item to edit**→**Option**→**Edit**→**OK**.

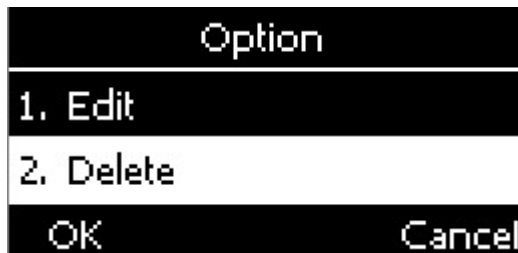


Edit the contact item via Web: **Contacts**→ **Contacts**→**click on the item to edit**→**modify messages**→**Click "Edit"**→**Click "Save"**.

## Delete the contact

Path to delete the contact on the phone: **Press Menu key**→**Contacts**→**Local Contacts**→**All contacts**→**Select the item to delete**→**Option**→**Delete**→ **OK**→**OK**.

Press the soft key **"Cancel"** at the Warning UI to stop deleting.

Delete the contact item via web: **Contacts**→ **Contacts**→**Select the item to delete**→**Click on "Delete"**→**Click on "Save"**.

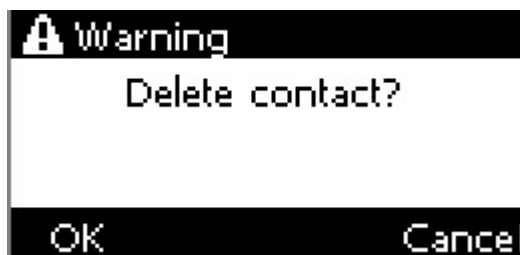

## Move to blacklist

Path to move to blacklist on the phone: **Press Menu key**→**Contacts**→**Local Contacts**→**All contacts**→**Select the item to move**→**Option** →**Move to Blacklist** → **OK**→**OK**.

Press the soft key **"Cancel"** at the Warning UI to stop this operation.

Move the contact item to blacklist via web : **Contacts**→ **Contacts**→**Select the item to move to blacklist**→**Click on "Move to black List"**→**Click on "Save"**.

## Blacklist

The purpose of blacklist's feature is to block the phone number inside blacklist to call the host phone number, but it's available for the hosted phone number to call any phone number in the black list.

The most operation of blacklist is the same as local phonebook except for the feature "Move to Contacts", it means moving an item of blacklist to local phonebook to resume the phone number to dial the host phone number normally.



## Remote phonebook

Index	Remote URL	Display Name
1	<input type="text"/>	<input type="text"/>
2	<input type="text"/>	<input type="text"/>
3	<input type="text"/>	<input type="text"/>
4	<input type="text"/>	<input type="text"/>
5	<input type="text"/>	<input type="text"/>















**Search Settings**

Search Remote Phonebook name ⓘ

Search Flash Time ⓘ

1. Remote URL: Set a remote phonebook download path. Support the TFTP,FTP,HTTP and HTTPs server.
2. Display name: Set a display name on the phone.
3. Search Remote Phonebook name: Select "Yes" or "No" to enable or disable search remote phonebook name.
4. Search Flash Time: Set the search flash time. Defaults to 120.

## LDAP

LDAP 	
Enable LDAP	<input type="text" value="Disable"/>
LDAP Name Filter	<input type="text"/> 
LDAP Number Filter	<input type="text"/> 
Server Address	<input type="text"/> Port <input type="text" value="389"/> 
Base	<input type="text"/> 
Username	<input type="text"/> 
Password	<input type="text"/> 
Max Hits	<input type="text" value="50"/>  (1~32000)
LDAP Name Attributes	<input type="text"/> 
LDAP Number Attributes	<input type="text"/> 
LDAP Display Name	<input type="text"/> 
Protocol	<input type="text" value="Version 3"/>
LDAP Sorting Results	<input type="text" value="Disable"/> 
LDAP Lookup For Incoming Call	<input type="text" value="Disable"/> 
LDAP Lookup For dialing	<input type="text" value="Disable"/> 


1. Enable LDAP: Select "Yes" or "No" to enable or disable LDAP.
2. LDAP Name Filter: Set the name of the LDAP search attributes.

3. LDAP Number Filter: Set the number of the LDAP search attributes.
4. Server Address: Set the LDAP server domain name or IP address.
5. Port: Set the LDAP server port number. Default to 389.
6. Base: Set the LDAP search base.
7. Username: Set the LDAP server username.
8. Password: Set the LDAP server password.
9. MD2SW(w) Hits(1~32000): Set the mD2SW(w)imum number of search results from the LDAP server.
10. LDAP Name Attributes: Set the name of the attributes returned from the server.
11. LDAP Number Attributes: Set the number of the attributes returned from the server.
12. LDAP Display Name: The contact record the name of the displayed on the LCD.
13. Protocol: Set the phone to support LDAP protocol version. Defaults to version 3.
14. LDAP Sorting Results: Set the phone to sort the search results.
15. LDAP Lookup For Incoming Call: Set the phone for LDAP search when incoming call.
16. LDAP Lookup For dialing: Set the phone for LDAP search when dialing,

## 4.6. History

It includes the dialed, answered, missed and transferred items, mD2SW(w)imum 400 items.

User is able to review or delete any item of the history on the phone. And enter "History" in below ways:

1. Press the key 
2. Press the Menu key, then select "History"
3. Press the soft key "History" while phone is under standby status


When any one the above of operations is done, details info of all recent history will be listed on LCD display, include the type of each item, the name of contact person, date and time.

Also, user is able to check the detail info of call history via Web, but only review operation is allowed while accessing via web.

atcom							
		Basic	Account	Network	DSS Keys	Phone	Contacts
Contacts							
Remote Phone Book							
LDAP							
Phone Call Info							
		Dialed List	Missed List	Received List	Forwarded List		
Index	Datetime	Duration	Local Identity	Name	Tel Number		
1	2017/5/5 10:03	00:00:02	115@172.16.0.237:5060	114	114@172.16.0.237		
2	2017/5/5 09:46	00:00:36	115@172.16.0.237:5060	120	120@172.16.0.237		

## Make calls from history


Path to make calls from history on the phone: **Enter history UI**→**Select the item to dial**→**Dial**.

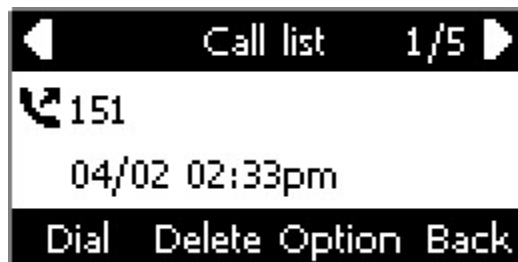


Delete one item from history

Path to delete one item from history on the phone: **Enter history UI**→**Select the item to delete**→**Delete**.

## Check the details of history

Path to check the details of history on the phone: **Enter history UI**→**Select the item to check**→**Option**→**Detail**→Press  or "OK".

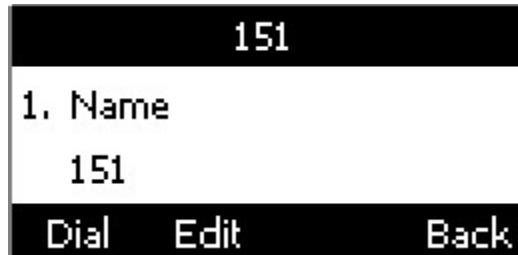

## Add to Contact



1. Enter "Call History"→Select the target item→Option→add to Contact→Press the key  or soft key "Confirm".

At this moment an "edit" page will be popped up.

please move the navigation key to check more



The item of "Office", "Mobile" and "Other" are able to be switched over between "Old Number" and current number. If the being operated item had been saved already in the contacts, "Old Number" will be the previous value, otherwise "Old Number" will be null. The UI page of "Add to Blacklist" is the same as above.

2. **Modify the contact name, phone number and ringtone.**
3. **Press the key  or soft key "Saved" to save the modification, press the key  or soft key "Cancel" to Cancel the modification.**

## Add to Blacklist

For more info about this operation, please refer to [Add to Contact](#).

Delete all History's records



Path to delete all history's records on the phone: **Enter History UI**→**Option**→**Delete all**→

Press  or "OK".

## 4.7. Message

### 4.7.1. Voice Mail

User will benefit from the feature of voicemail when they're not available to answer an incoming call or missed some incoming calls. However this feature must be supported by Server. Voicemail must be set up before using it.

Set the voicemail via Web: **Account**→**Basic**→**Select an account to configure**→**Voice Mail**.



Sometimes the voicemail push can't be reached in time, because the configuration problem with Server, you must configure some related parameter via Web to make the phone automatically send its request to Server for getting voicemail info.

Set "Subscribe for MWI" via web: **Account**→**Advanced**→**Subscribe for MWI**.

Set "MWI Subscription Period(secs)" via web: **Account**→**Advanced**→**MWI Subscription Period(secs)**.

### Set Voice Mail



There are 3 different methods to set up the voicemail,


1. Press the key  after factory set
2. Press the key  for a while
3. Press the Menu key→Select "Message"→Setup Voicemail



## View Voice Mail

User is able to check voicemail in below ways:

1. **Setup voicemail number**→**Press the key** 
2. **Press the key** →**Select "Message"→"View Voicemail"**

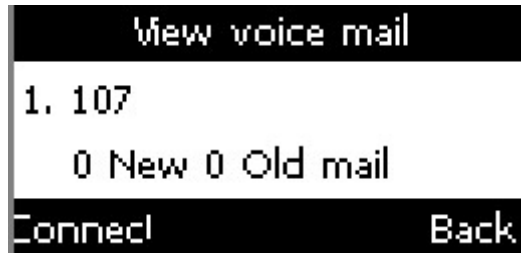


Select the account with "N new N old mail", and press the soft key "Connect", the corresponding voicemail will be connected.

Select the account with "Unregistered", and press the soft key "Connect", the setting page of Voicemail will be popped up.

## 4.8. Settings


Basic settings and Advanced settings will be introduces in this part,

### Basic Settings

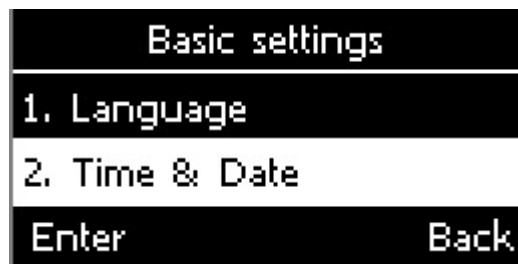


#### 1. Language

D2SW supports multiple language, to modify the language, please press the **Menu** key→**Setting**→**Basic setting**→**Language**→**Select the target language and press the soft key "Save"**.

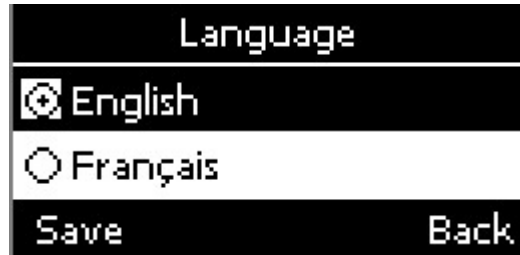

Set language via web: There is a drop-down box at the top left corner of webpage, choice one kind of language and click, the language will take effect immediately.

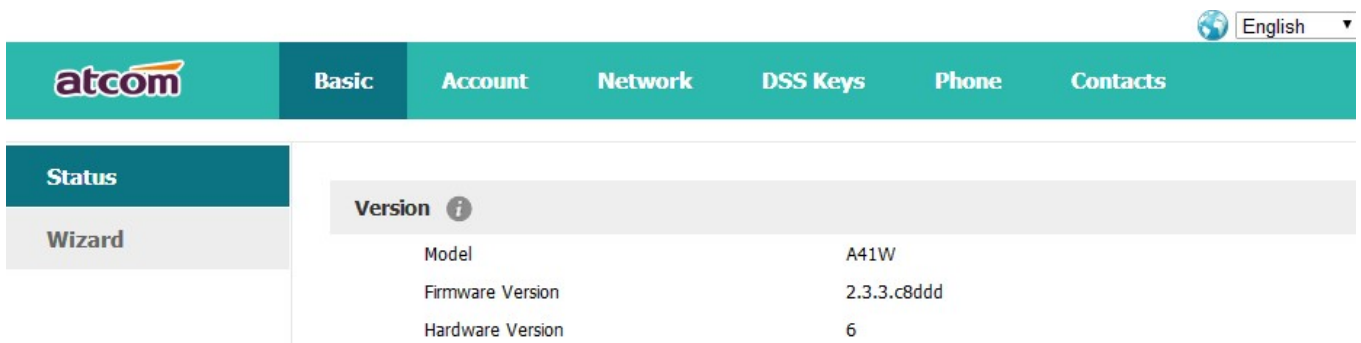

## 2. Time &Date





Time & Date will be displayed at the standby page of D2SW, and these info will be related with all process of IP phone. "Time & Date" can be gained by NTP Server automatically or set manually.

### NTP Setting




Path to set on the phone: **Press the Menu key→Settings→Basic Settings→Time & Date→NTP Settings.**

Please move the navigation key to check more:



Item	Operation	Description
<b>Time Zone</b>	Press the key   or soft key "Switch" to modify it.	Select the correct Time Zone for the IP phone.
<b>NTP Server</b>	Key in the IP address of domain name by the number keys, "*" , "#"	Specify the NTP Server
<b>Secondary NTP Server</b>	Key in the IP address of domain name by the number keys, "*" , "#"	Specify the standby NTP Server
<b>Daylight-Saving Time</b>	Press the key   or soft key "Switch" to modify it.	Optional: "Off", "Auto" or "Manual". And "Manual" mean user must set this via web.

Set NTP via Web: **Phone**→**Preference**.

Time Zone	<input type="text" value="+8 China(Beijing)"/>	
Primary NTP Server	<input type="text" value="pool.ntp.org"/>	
Secondary NTP Server	<input type="text" value="time.windows.com"/>	
Update Interval(secs)	<input type="text" value="1000"/>	
daylight	<input type="text" value="Disable"/>	
Fixed Type	<input checked="" type="radio"/> By Date <input type="radio"/> By Week	
Start Month	<input type="text" value="January"/>	
Start Date	<input type="text" value="1"/>	
Start Hour of Day	<input type="text" value="0"/>	
Start Day of Week	<input type="text" value="Sunday"/>	
Start Week of Month	<input type="text" value="First In Month"/>	
Stop Month	<input type="text" value="January"/>	
Stop Date	<input type="text" value="1"/>	
Stop Hour of Day	<input type="text" value="0"/>	
Stop Day of Week	<input type="text" value="Sunday"/>	
Stop Week of Month	<input type="text" value="First In Month"/>	
Offset(minutes)	<input type="text" value="0"/>	

<b>Item</b>	<b>Operation</b>	<b>Description</b>
<b>Time Zone</b>	Click drop-down box to select	Set a time zone matches condition
<b>Primary NTP Server</b>	Manual input	The primary NTP server that provide time and date
<b>Secondary NTP Server</b>	Manual input	The secondary NTP server that provide time and date
<b>Update Interval(secs)</b>	Manual input	The interval that the phone gains time and date from NTP server
<b>Daylight</b>	Click drop-down box to select	A switch to control the status that whether to enable the daylight or not
<b>Fixed Type</b>	Radio content	Daylight fixed type, only the specified items are configurable
<b>Start Month</b>	Click drop-down box to select	The month that the daylight rule begins taking effect
<b>Start Date</b>	Manual input	The day that the daylight rule begins taking effect
<b>Start Hour of Day</b>	Manual input	The hour of day that the daylight rule begins taking effect
<b>Start Day of Week</b>	Click drop-down box to select	The day of week that the daylight rule begins taking effect
<b>Start Week of Month</b>	Click drop-down box to select	The week of month that the daylight rule begins taking effect
<b>Stop Month</b>	Click drop-down box to select	The month that the daylight rule stops taking effect
<b>Stop Date</b>	Manual input	The day that the daylight rule stops taking effect
<b>Stop Hour of Day</b>	Manual input	The hour of day that the daylight rule stops taking effect
<b>Stop Day of Week</b>	Click drop-down box to select	The day of week that the daylight rule stops taking effect
<b>Stop Week of Month</b>	Click drop-down box to select	The week of month that the daylight rule stops taking effect

<b>Offset(minutes)</b>	Manual input	The offset time that daylight rule takes effect
------------------------	--------------	---

Manual Settings

Path to set on the phone: **Press the menu key→Settings→Basic Settings→Time & Date→Manual Settings.**

Please move the navigation key to check more:



Item	Operation	Description
<b>Year</b>	Key in "Year" with the number key, "*"and "#"	Date info
<b>Month</b>	Key in "Month" with the number key, "*"and "#"	
<b>Day</b>	Key in "Day" with the number key, "*"and "#"	
<b>Hour</b>	Key in "Hour" with the number key, "*"and "#"	Time info
<b>Minute</b>	Key in "Minute" with the number key, "*"and "#"	
<b>Second</b>	Key in "Second" with the number key, "*"and "#"	

Set the Time & Date manually via web: **Phone→Preference.**

Manual Time

Date


Time

Item	Operation	Description
<b>Manual Time</b>	Click the drop-down box to select	A switch to control the status whether to enable the manual time or not
<b>Date</b>	Manual input, click "Generated Date" to gains date from the computer	Set date manually
<b>Time</b>	Manual input, click "Generated Time" to gains time from the computer	Set time manually

### 3. Time&Date Format

Path to set on the phone: **Press the Menu Softkey**→**Settings**→**Basic Settings**→**Time & Date Format**.

please move the navigation key to check more:

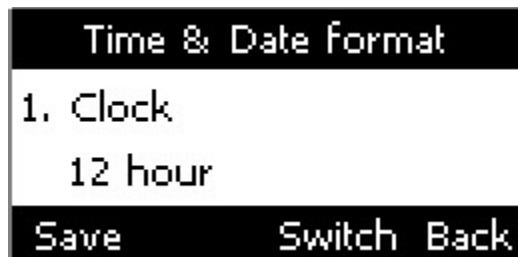


Item	Optional	Example of result
<b>Clock</b>	12 hour	03:30pm
	24 hour	15:30
<b>Date</b>	WWW MMM DD	TuesdayOct.16
	DD-MMM-YY	16-Oct.-16
	YYYY-MM-DD	2016-10-16
	DD/MM/YYYY	16/10/2016
	MM/DD/YY	10/16/16



	DD MMM YYYY	16,Oct.,2016
	WWW DD MMM	Tuesday,17,Oct.

Set the Time &Date Format via Web: **Phone**→**Preference**

#### 4. Ringtones

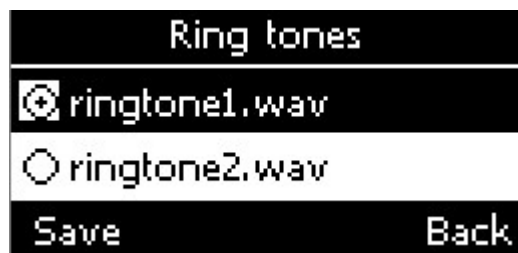
5 different ringtones have been provided by D2SW for selection. Path to set on the phone:  
**Press the Menu softkey**→**Settings**→**Basic Settings**→**Ringtones**.



For the selected ringtone, there is a dot inside the circle. Press the key   to select other ringtone for playing.


Set ringtones via Web: **Account**→**Basic**→**Ring tones**.

#### 5. Headset Memory Mode

Headset memory mode can be used to control the default device to make or answer calls. This function is disabled by default, which means the phone will communicate with others by hand-free when pre-dial or making calls from history or contacts, and so is the situation that pressing "Answer" soft key to accept an incoming call. Once this function is enabled, the phone will make or answer calls by headset. Long press  can change the status of the "Headset Memory Mode".

This function can be configured on the phone only: **Press the Menu key**→**Settings**→**Basic Settings**→**Headset Memory Mode**.



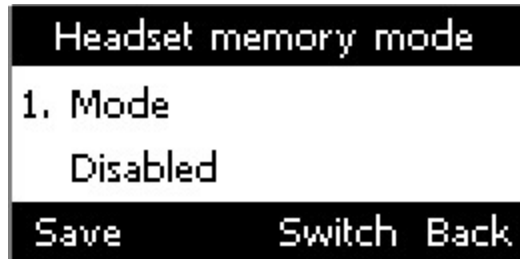

## 6. Phone Unlock PIN

Phone Unlock PIN: Unlock the phone locked conditions.

please move the navigation key to check more and press the cancel key to back the function,



Item	Operation	Description
<b>Current PIN</b>	Manual input	Input the phone current PIN, Default factory pin:123
<b>New PIN</b>	Manual input	Set the new PIN
<b>Confirm PIN</b>	Manual input	Confirm the new PIN

## Advanced Settings

Password will be requested while accessing the page of "Advanced Settings". This password is the same as the user's("admin") to access.

### 1. Account

path to set the account info on phone: Press  → **Settings** → **Advanced Settings** → **Input password** → **Accounts**.

Account 1	
1. Activation	Enable
2. Label	
3. Display name	test118
4. Register name	
5. User name	118
6. Password	*****
Save	Switch
	Back

Item	Description
<b>Activation</b>	The status of account, the default is "Enable", if set this as "Disable", the account will be forbidden.
<b>Label</b>	It will show on the phone, can skip this item
<b>Display Name</b>	Parameter that in the SIP, if the SIP Server is supportable, this name will show on the phone of called
<b>Register Name</b>	The register ID, supplied by SIP Server, can skip this item
<b>User Name</b>	Account ID
<b>Password</b>	Password for account
<b>SIP Server</b>	The address that accounts needed to register from
<b>Outbound Status</b>	The status of Outbound Server, "off" by default
<b>Outbound Proxy</b>	IP address of Outbound Agency
<b>Stun Status</b>	The status of Stun Server, "off" by default
<b>Stun Server</b>	IP address of Stun Server

Configure account via web: **Account** → **Basic**

atcom		Basic	Account	Network	DSS Key	Phone	Contacts
Basic	Account	Account 1					
Codecs	Register Status	Register failed					
Advanced	Account Active	Enable					
	Label	<input type="text"/>	<i>i</i>				
	Display Name	<input type="text"/>	<i>i</i>				
	Register Name	<input type="text"/>	<i>i</i>				
	* User Name	<input type="text"/>	<i>i</i>				
	Password	<input type="text"/>	<i>i</i>				
	* SIP Server	<input type="text"/>	Port	<input type="text" value="5060"/>	<i>i</i>		
	Enable Outbound Proxy Server	Disable		<i>i</i>			
	Outbound Proxy Server	<input type="text"/>	Port	<input type="text" value="5060"/>	<i>i</i>		
	Transport	UDP		<i>i</i>			
	NAT Traversal	Disable		<i>i</i>			
	STUN Server	<input type="text"/>	Port	<input type="text" value="3478"/>	<i>i</i>		

## 2. Set Password

The password for Advanced Settings also is used for Web access as the role "admin". Path to

set password on phone: Press  → **Settings** → **Advanced Settings** → **Input password** → **Set Password**.


Set password

1. Current PWD	
2. New PWD	
3. Confirm PWD	

Save
abc
Delete
Back

Item	Description
<b>Current PWD</b>	The current password for web access as the role of "admin", it's "admin" by default.
<b>New PWD</b>	To set the new password, blank is acceptable.
<b>Confirm PWD</b>	Input the new password again, to confirm the new password.

Set password via Web: **Phone**→**Security**.

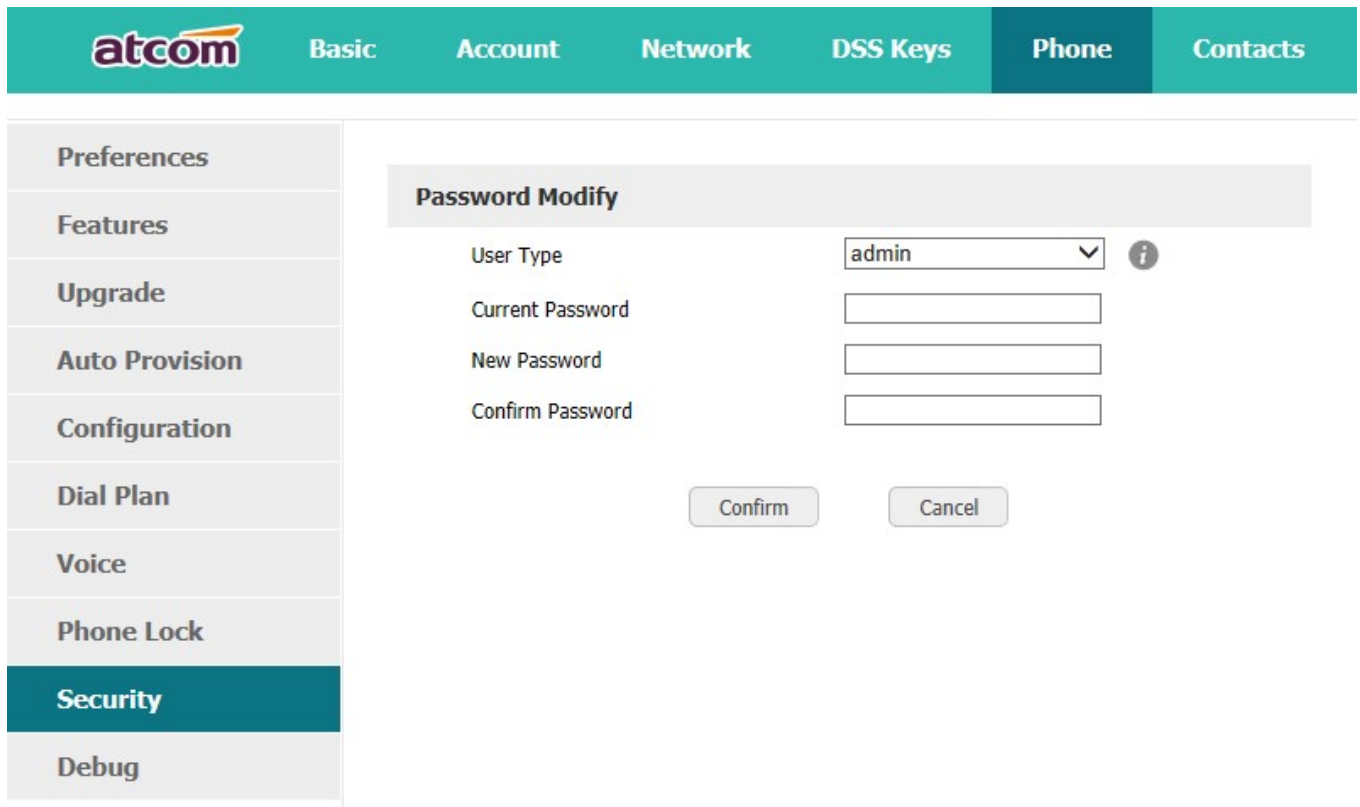

The screenshot shows the atcom web interface with the 'Phone' tab selected. The left sidebar contains a menu with 'Security' highlighted. The main content area displays the 'Password Modify' form with the following fields:


- User Type: dropdown menu showing 'admin' with a downward arrow and an information icon.
- Current Password: text input field.
- New Password: text input field.
- Confirm Password: text input field.

At the bottom of the form are two buttons: 'Confirm' and 'Cancel'.

### 3. Network

Path to set network parameters on phone: **Press**  → **Settings**→**Advanced Settings**→**Input the password**→**Network**.

please move the navigation key to check more:

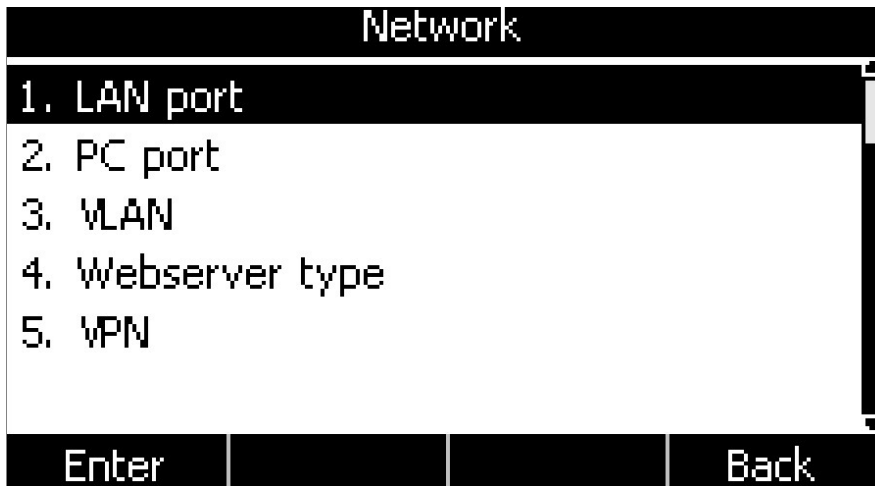

### ➤ LAN Port

Connect the phone with local network via LAN port, to gain IP address in 3 ways: DHCP, Static. Set the LAN port via Web: **Network**→**Basic**.

#### **DHCP**

The phone gains IP address via DHCP and Static DNS by default.

#### **STATIC IP**

If the phone gains IP address via Static IP, user must input the IP address info manually.


### ➤ Webserver Type

Webserver type include HTTP and HTTPS, different access port will be required by different access type, user is able to confirm the port info at the webpage, HTTP & HTTPS are both permitted by default.

Set Webserver type via Web: **Network**→**Advanced**→**WebServer**→**Type**.

### ➤ VPN

D2SW support the feature of Open VPN, and this feature must be supported by VPN Server.

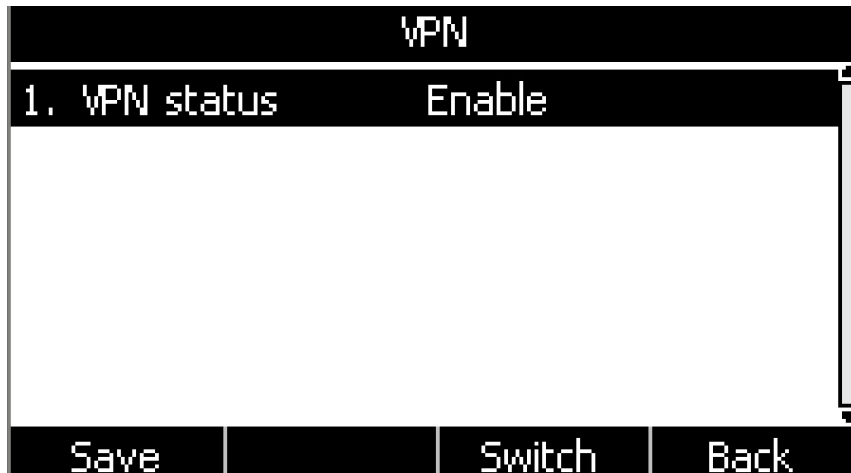

Set the VPN via Web: **Network** → **Advanced** → **VPN**.



### ➤ **802.1X**

IEEE 802.1X authentication is an IEEE standard for Port-based Network Access Control(PNAC), part of the IEEE 802.1 group of networking protocols. It offers an authentication mechanism for devices to connect to a LAN or WLAN.

It supports protocol EAP-MD5, EAP-TLS, EAP-PEAP/MSCHAPv2, EAP-TTLS/EAP-MSCHAPv2, EAP-PEAP/GTC and EAP-TTLS/EAP-GTC for 802.1X authentication.

Set the 802.1X via the webpage: **Network** → **Advanced** → **802.1X**

**802.1X** i

Mode	<input type="text" value="Disable"/>
Anonymous Identity	<input type="text"/>
Identity	<input type="text"/>
Md5 Password	<input type="text"/>
CA Certificates	<input type="text"/> <input type="button" value="Browse..."/>
	<input type="button" value="Import"/>
Device Certificates	<input type="text"/> <input type="button" value="Browse..."/>
	<input type="button" value="Import"/>

#### 4. Keypad Lock

It support enable or disable the keypad lock feature, if enable, **the default password is 123**:

Please move the navigation key to check more

Keypad lock

1. Lock enable	Disabled
2. Lock type	Menu key
3. Lock timeout	<input style="width: 80%;" type="text" value="10"/>
4. Unlock before	Disabled

Save
Switch
Back

Keypad lock via webpage: **phone**→**Phone lock**

atcom
Basic
Account
Network
DSS Keys
Phone
Contacts

Preferences

Features

Upgrade

Auto Provision

Configuration

Dial Plan

Voice

Phone Lock

Security

Debug

Phone Lock


Keypad Lock Enable	<input type="text" value="Disable"/>
Keypad Lock Type	<input type="text" value="Menu Key"/>
Phone Unlock PIN(0~15 Digit)	<input type="text" value="..."/>
Phone Lock Time Out(0~3600s)	<input type="text" value="10"/>
Emergency	<input type="text" value="110,120,119,911"/> <span style="float: right; font-size: 0.8em;">i</span>

1. Keypad Lock Enable: select "Yes" or "No" to enable or disable keypad lock
2. Keypad Lock Type: Menu key/Function keys/All keys/Answer call only.
3. Phone Unlock PIN(0~15 Digit):set the phone unlock PIN. Range: 0~15 digit.
4. Phone Lock Time Out(0~3600s): set the phone lock time out. Range: 0~3600s
5. Emergency :set emergency number. Default to 110.120.119 and 911.


## 5. Reboot

After the restart, the phone will back to standby interface.



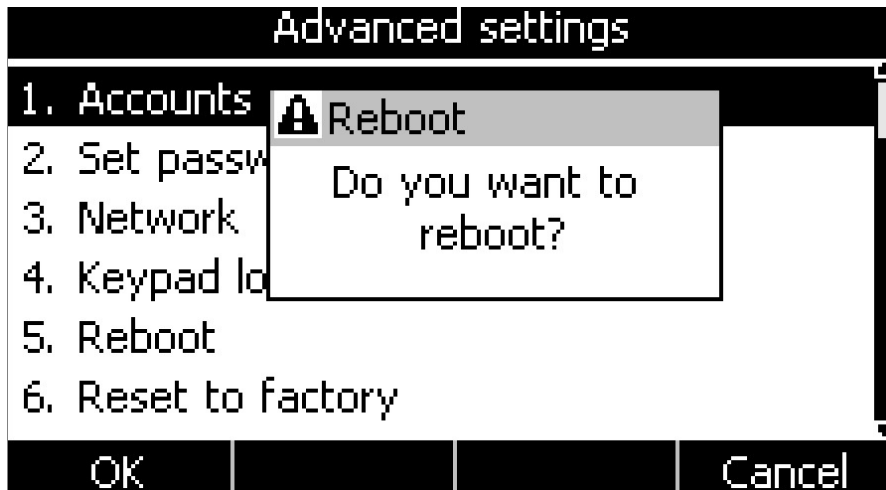


Reboot via webpage: **Phone**→**Upgrade**→**Reboot**

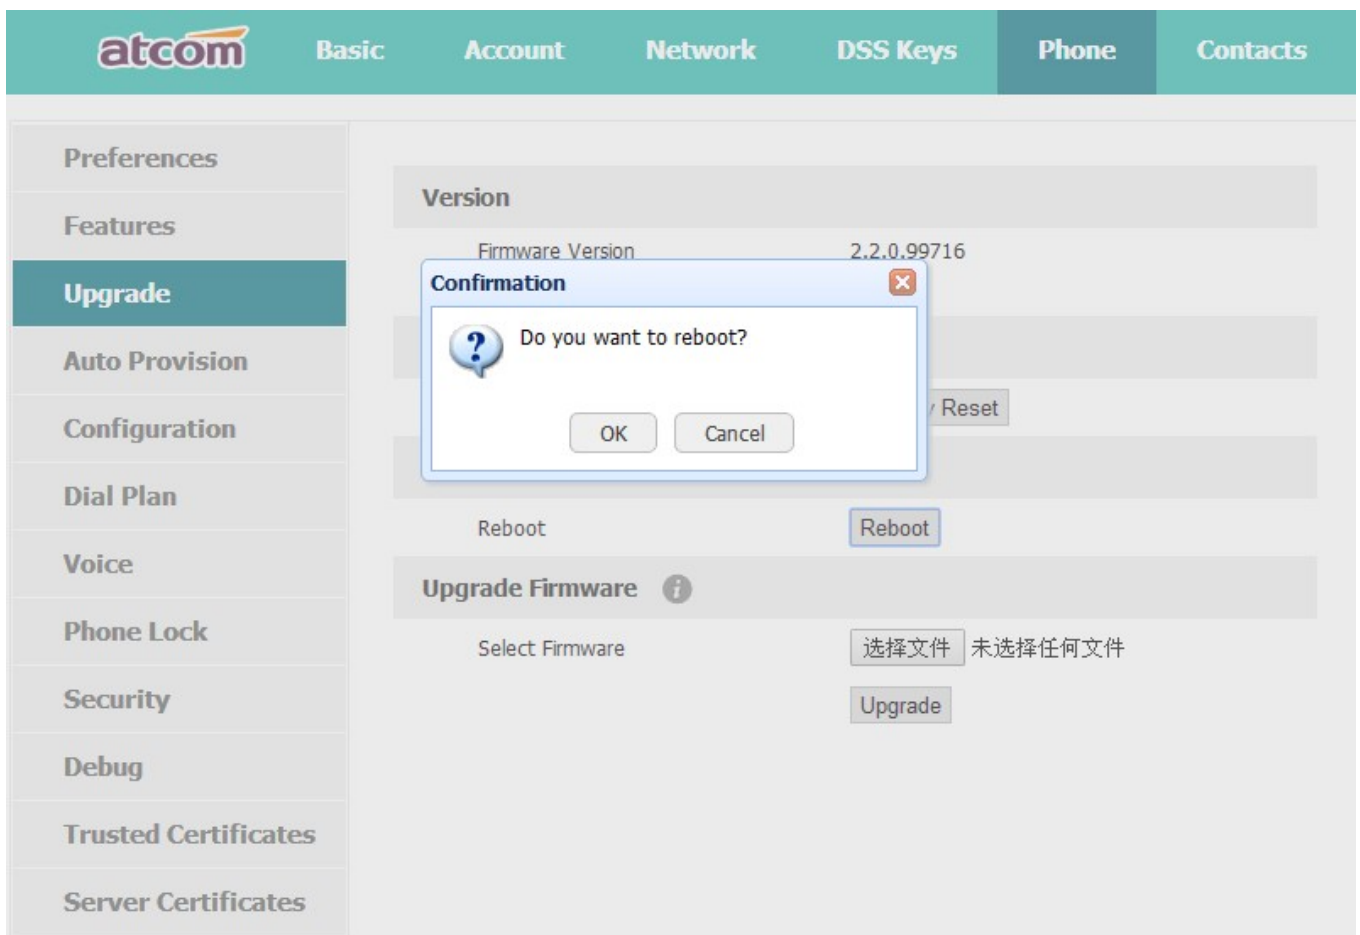


## 6. Reset to factory

Once reset to factory, all parameter settings will back to the factory default value, and all configure will be cleared, users must be careful on this.

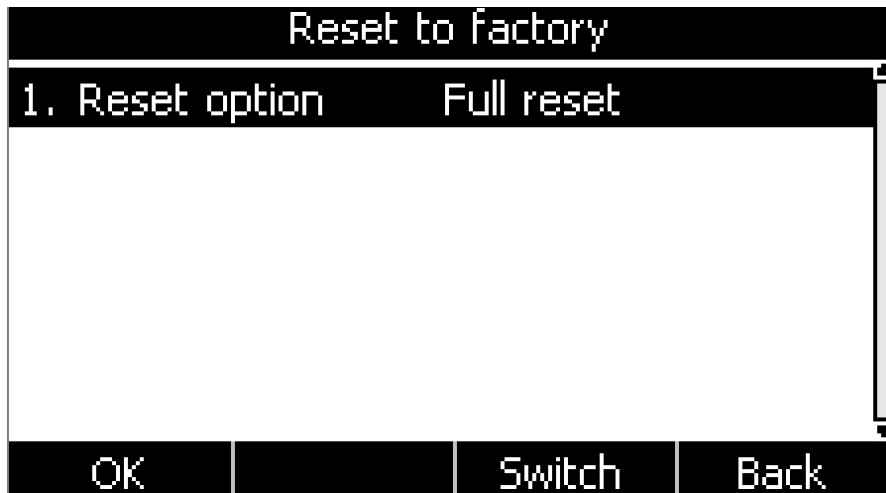

Reset Option: **Full Reset**, **Config Reset** and **UserData Reset**.

Reset to factory via Web: **Phone**→**Upgrade**→**Reset to Factory**.

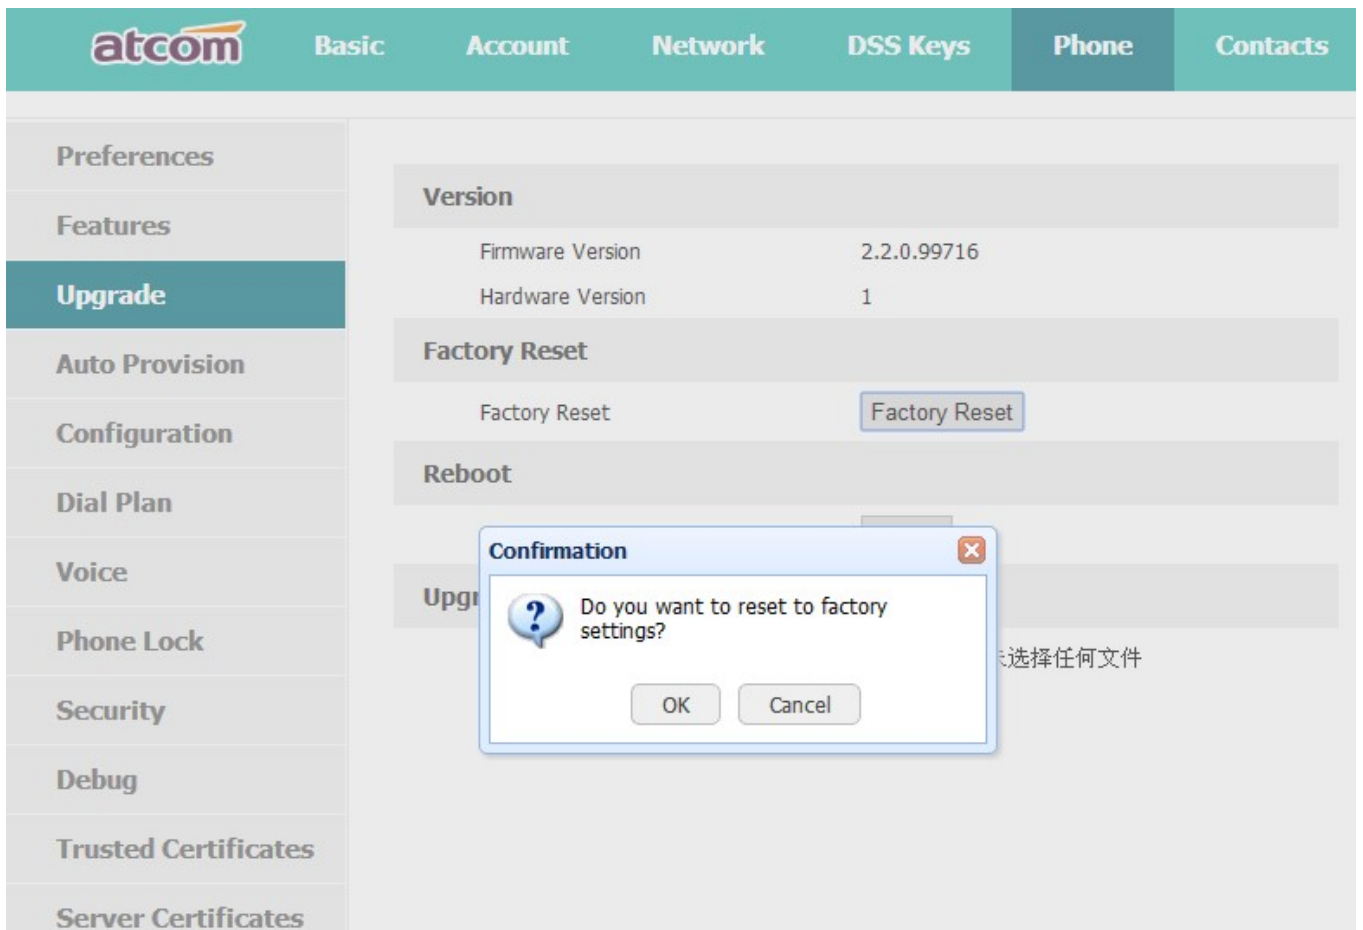


## 7. Network priority

From the phone webpage, D2SW default enable the Ethernet network priority,

Please follow as below screenshot, choose **Network** → **Advanced** → **Network priority**,

- 1) After plug into the network cable, the Wi-Fi will disable by automatically. (Noted: if need use the Wi-Fi, please enable the Wi-Fi setting in manual)
- 2) Then the phone plug off the network cable, the Wi-Fi will connected by automatically

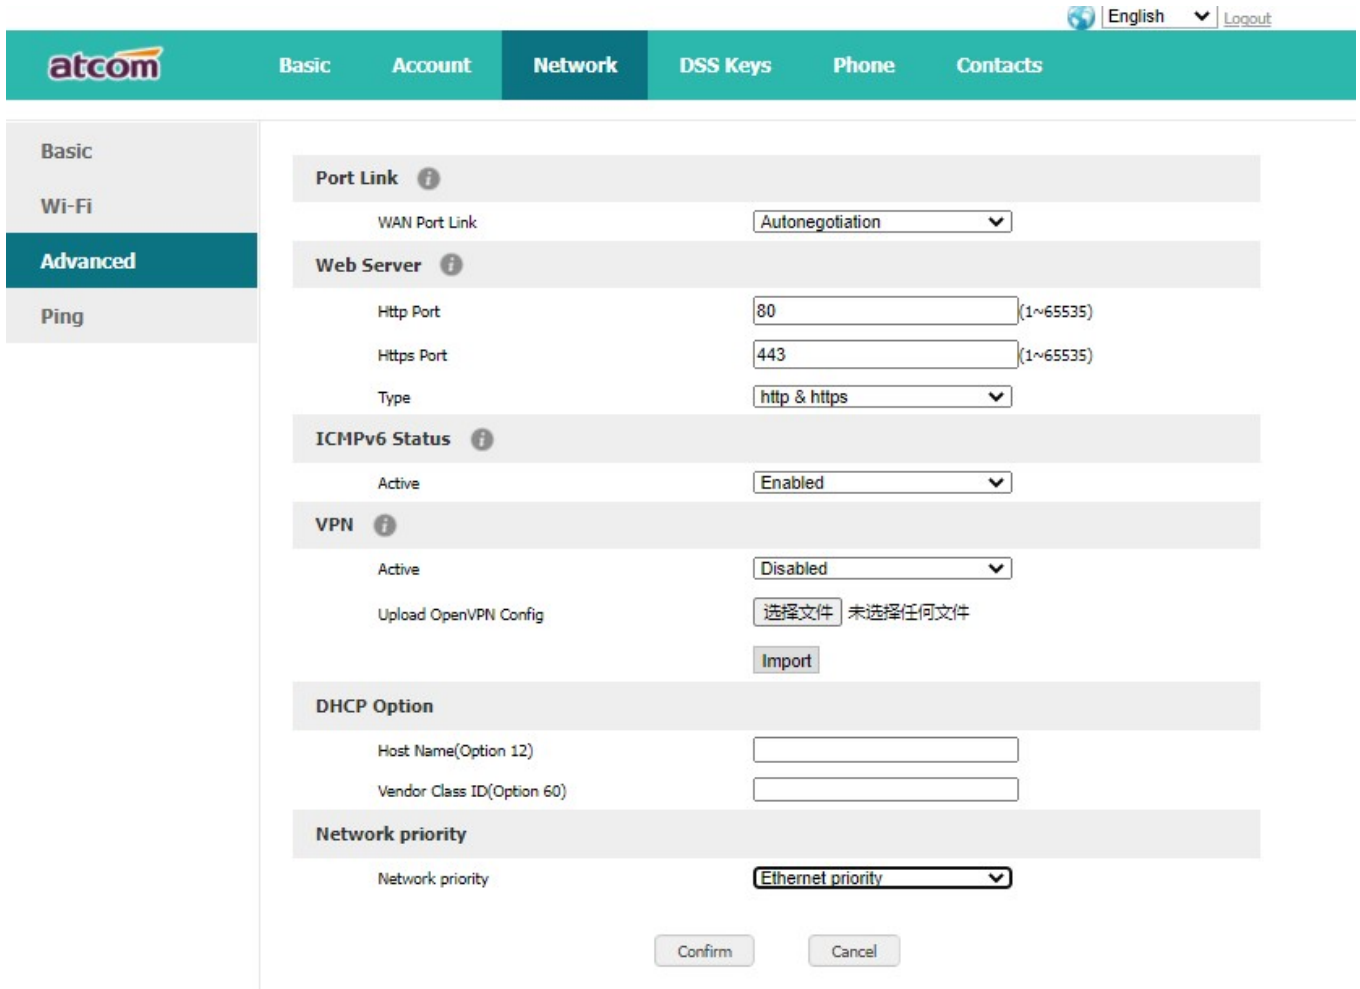

The screenshot shows the ATCOM web interface with the 'Network' tab selected. The 'Advanced' sub-tab is active, and the 'Network priority' section is expanded. The 'Network priority' dropdown menu is set to 'Ethernet priority'. Other visible settings include:


- Port Link:** WAN Port Link set to 'Autonegotiation'.
- Web Server:** Http Port (80), Https Port (443), Type (http & https).
- ICMPv6 Status:** Active set to 'Enabled'.
- VPN:** Active set to 'Disabled', Upload OpenVPN Config set to '未选择任何文件'.
- DHCP Option:** Host Name (Option 12) and Vendor Class ID (Option 60) fields are empty.

Buttons for 'Confirm' and 'Cancel' are visible at the bottom of the form.

## 8. Ping

D2SW support Ping feature, it can diagnose the network.

Please input the address into the Network – Ping,

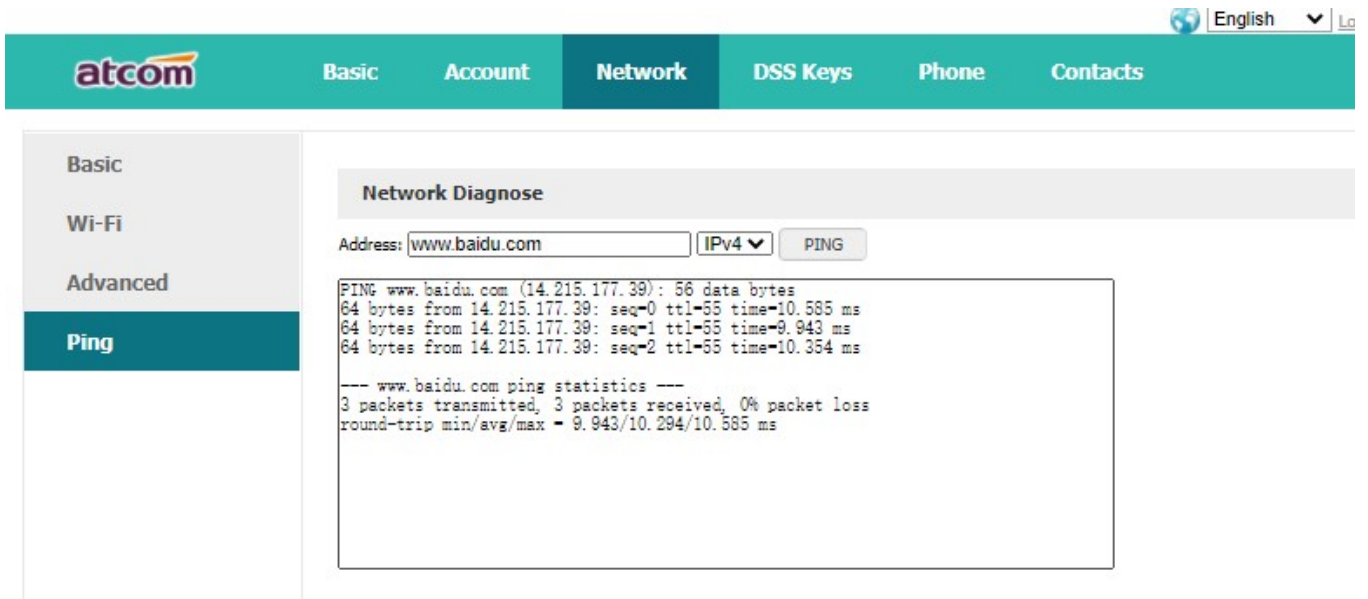




## 4.9. Display

For more convenient, users are able to adjust the contrast grade and backlight of the main LCD display.




### 1. Slave Contrast

There are 9 different contrast grades for options, press the soft key **"Switch"** or the key .  for modification, 8 is the default value.

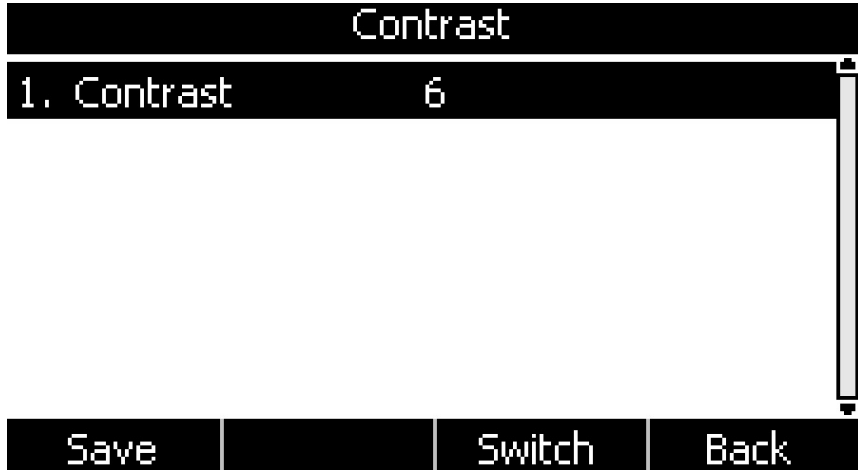

## 2. Backlight

Backlight is the brightness of LCD, also it has been defined as 9 different grades. The number "9" means the lightest.

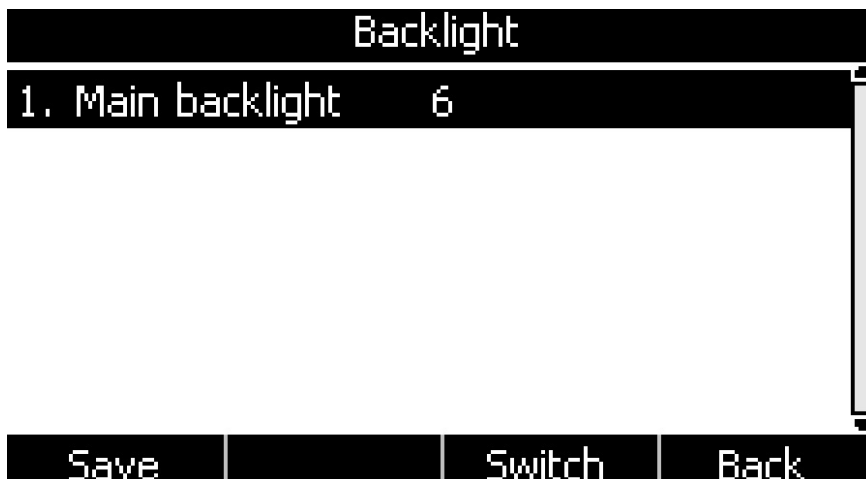


## 5. Advanced Feature

### 5.1. Codecs


D2SW support multiple codecs, users can select the codes via Web.


The codec include: PCMU, PCMA, G729, G722, iLBC\_13\_3, iLBC\_15\_2, G726-32, G726-16, G726-40, G726-24, L16

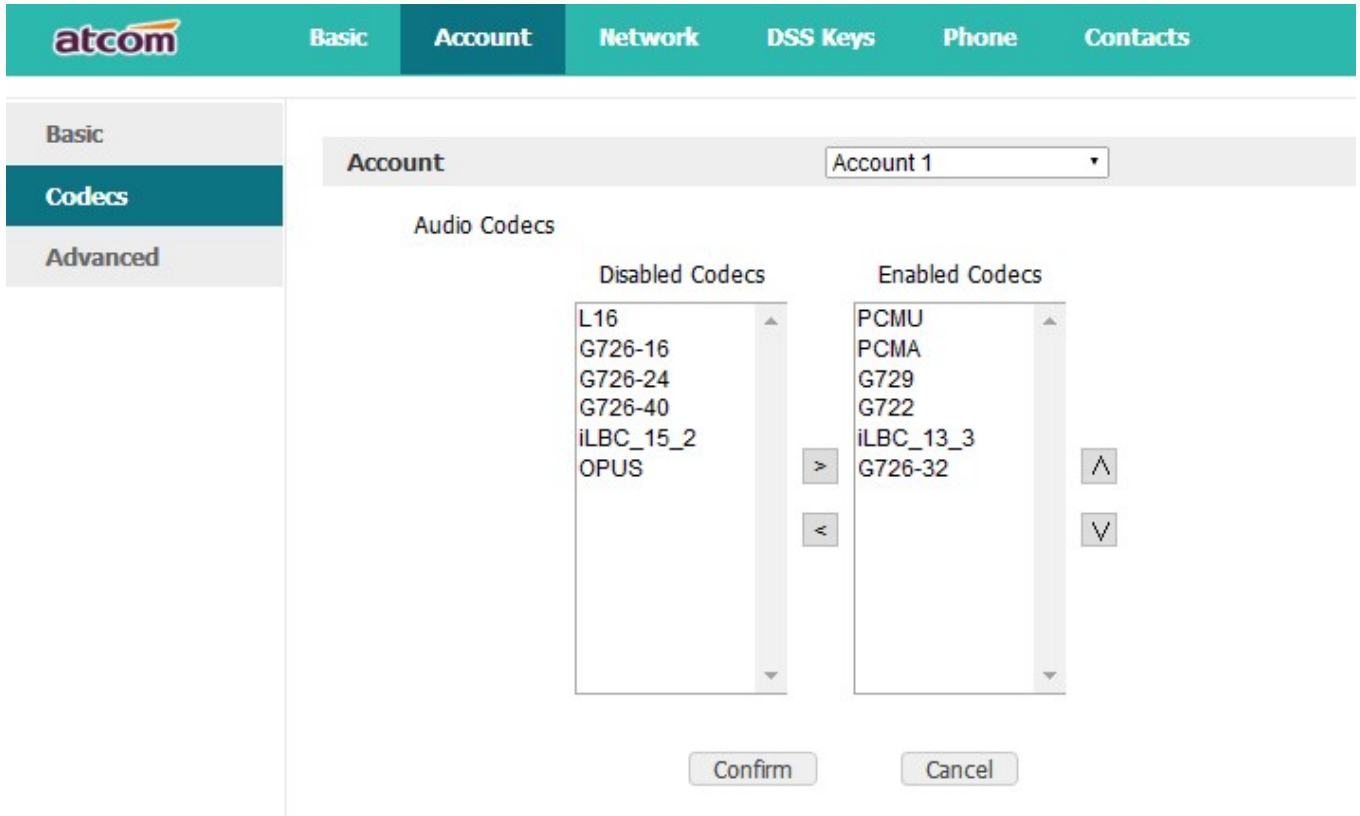



The screenshot shows the 'Account' configuration page for 'Account 1'. The 'Audio Codecs' section is active, displaying two columns: 'Disabled Codecs' and 'Enabled Codecs'. The 'Disabled Codecs' list includes L16, G726-16, G726-24, G726-40, iLBC\_15\_2, and OPUS. The 'Enabled Codecs' list includes PCMU, PCMA, G729, G722, iLBC\_13\_3, and G726-32. Navigation buttons (>, <, ^, v) are present between the lists, and 'Confirm' and 'Cancel' buttons are at the bottom.

Notes: OPUS is our new support codec.

 means to enable the item of “Disabled Codecs” ;

 means to disable the item of “Enabled Codecs” ;

Click the button  or  to sort all enabled codes, the top item has the highest priority.


Note: Multiple different items of G726, iLBC should not activated simultaneously.

## 5.2. Capture and Upgrading

### Capture package:

It would record the phone current info.


Via webpage:**phone**→**Debug**→**PCAP Feature**

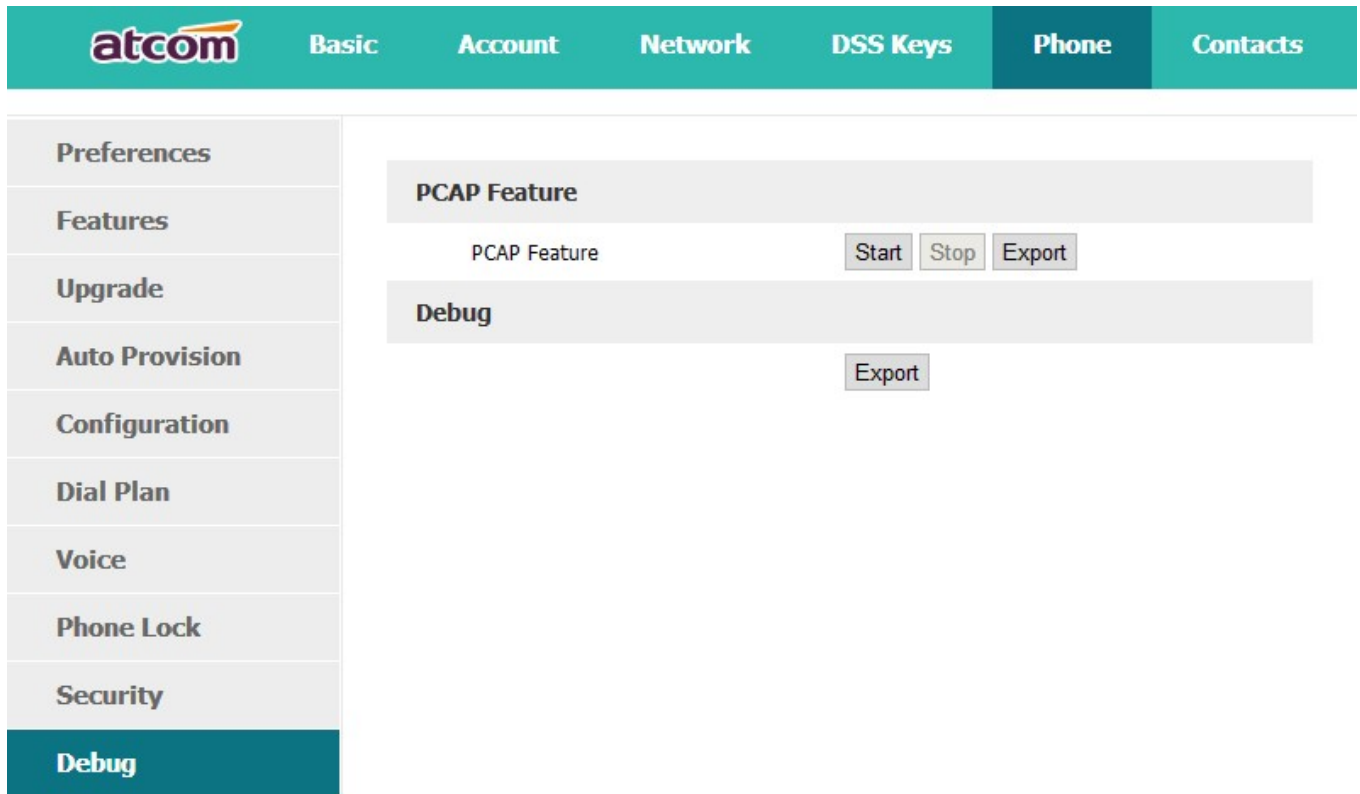

Click the button “Start” to start the capture and click the button “Stop” to end the capture. Then click the button “export” to download the capture file.

### **Upgrade firmware:**

Via webpage:**phone**→ **Upgrade**→ **Upgrade Firmware**

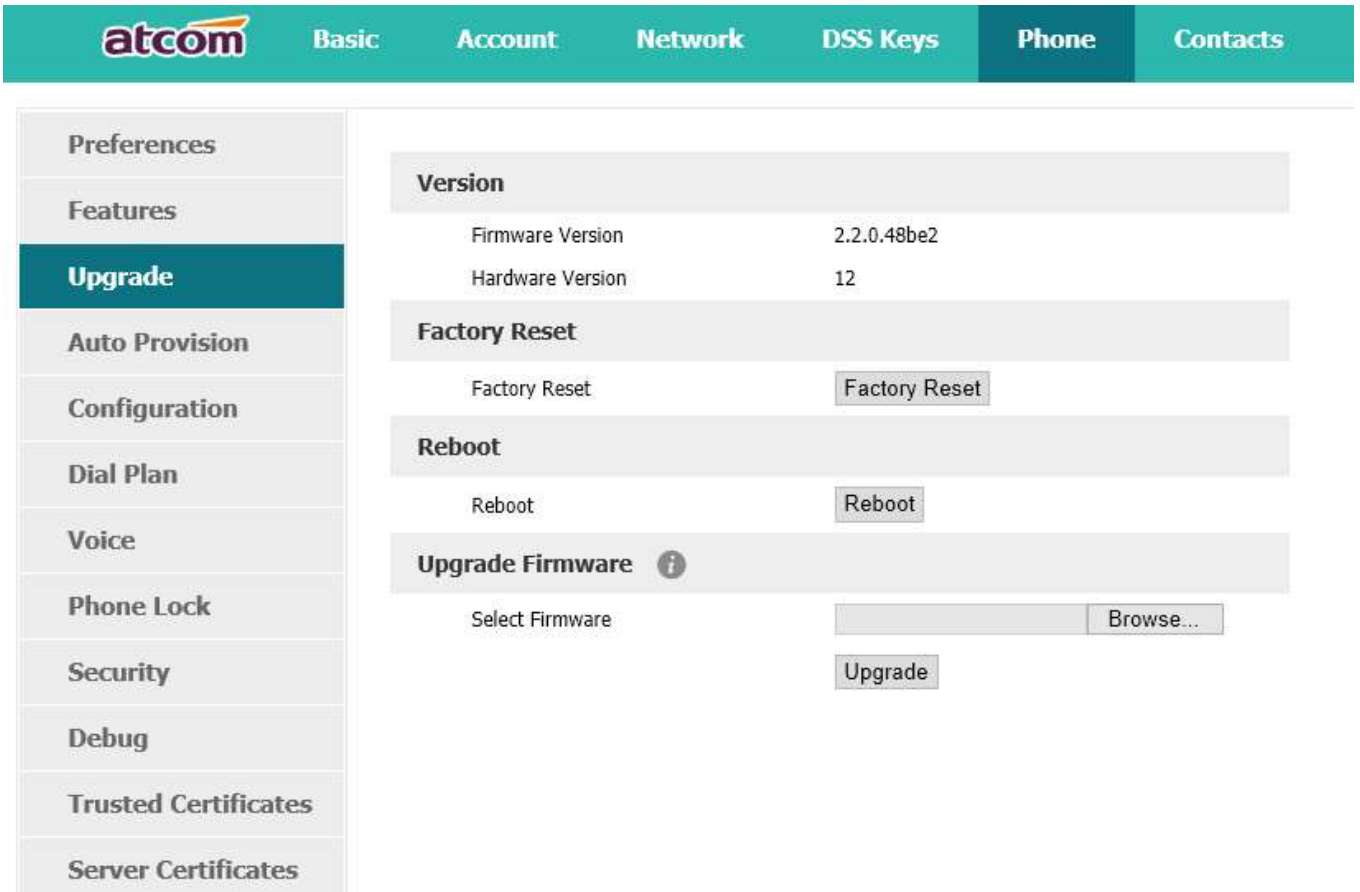

The screenshot shows the 'atcom' web interface with the 'Phone' tab selected. The left sidebar contains a menu with 'Upgrade' highlighted. The main content area is divided into several sections:


- Version:** Displays 'Firmware Version: 2.2.0.48be2' and 'Hardware Version: 12'.
- Factory Reset:** Contains a 'Factory Reset' button.
- Reboot:** Contains a 'Reboot' button.
- Upgrade Firmware:** Includes an information icon, a 'Select Firmware' label, a text input field, a 'Browse...' button, and an 'Upgrade' button.

Before upgrading the firmware of phone, users are suggested to check the version of current firmware. Click the button "Choose file" to select the target local file and click "Upgrade" to process upgrading, this will cost a couple of minutes. And after reboot, the phone will be upgraded successfully.






### 5.3. Auto Provision

User is able to configure the phone to upgrade automatically.



	
Basic	Account
Network	DSS Keys
<b>Phone</b>	Contacts

<ul style="list-style-type: none"> <li>Preferences</li> <li>Features</li> <li>Upgrade</li> <li><b>Auto Provision</b></li> <li>Configuration</li> <li>Dial Plan</li> <li>Voice</li> <li>Phone Lock</li> <li>Security</li> <li>Debug</li> </ul>	<h3>Auto Provision</h3> <p>PnP Active <input checked="" type="radio"/> On <input type="radio"/> Off </p> <p>DHCP Active <input checked="" type="radio"/> On <input type="radio"/> Off </p> <p>Provisioning Server <input type="text"/> </p> <p>User Name <input type="text"/></p> <p>Password <input type="text"/> </p> <p>Common AES Key <input type="text"/></p> <p>MAC-Oriented AES Key <input type="text"/></p> <p>Check New Config <input checked="" type="radio"/> On <input type="radio"/> Off </p> <p>Repeatedly <input type="radio"/> On <input checked="" type="radio"/> Off</p> <p>Interval(minutes) <input type="text" value="1440"/></p> <p>Weekly <input type="radio"/> On <input checked="" type="radio"/> Off</p> <p>Time <input type="text" value="03"/> : <input type="text" value="00"/> -- <input type="text" value="03"/> : <input type="text" value="00"/></p> <p>Day of week</p> <ul style="list-style-type: none"> <li><input checked="" type="checkbox"/> Sunday</li> <li><input checked="" type="checkbox"/> Monday</li> <li><input type="checkbox"/> Tuesday</li> <li><input type="checkbox"/> Wednesday</li> </ul>
---	--


Item	Description
<b>PnP Active</b>	Select "On" or "Off" to enable or disable PNP automatic updates
<b>DHCP Active</b>	Select "On" or "Off" to enable or disable DHCP option automatic updates
<b>Provisioning Server</b>	The address to save control file for auto upgrading, it can filled by http, https, tftp and ftp server, for example, tftp://192.168.1.111
<b>User Name</b>	The username to access the file server
<b>Password</b>	The password to access the file server
<b>Common AES Key</b>	Configures the plaintext AES key for decrypting the Common CFG file
<b>MAC-oriented AES KEY</b>	Configures the plaintext AES key for decrypting the MAC-oriented CFG file

<b>Check New Config</b>	If set this parameter as "On", the phone will do some check for upgrading, and it will upgrade automatically once the conditions are met
<b>Repeatedly</b>	If set this parameter as "On", the phone will do some check for upgrading after "Interval(minutes)", and it will upgrade automatically once the conditions are met
<b>Interval(minutes)</b>	This parameter is configurable once the Repeatedly is "On"
<b>Weekly</b>	If set this parameter as "On", the phone will do the check for upgrading at a certain time in every week
<b>Time</b>	The time range that the phone do the check for upgrading every week, and it's configurable once the Repeatedly is "On"
<b>Day of week</b>	The day of week that the phone do the check for upgrading every week, and it's configurable once the Repeatedly is "On"

## 5.4. Export & Import configuration file

If user wants to set the same configuration on multiple phones, there is an easy way that export the configuration file from one phone and then import this file into other phones. This operation can be completed via Web only.

**Import / Export Config**

Import File 

Choose file No file chosen



Export User Data

### 5.4.1. Export configuration file









There is two ways to export the configuration files,

- Don't check the "Export User Data" and click "Export" directly, it will export the template of the configuration file;
- Check the "Export User Data" and then click "Export", it will export a configuration file that carries with user's configured data.

To modify the exported configuration file, you should decompress it until you get a file names as configuration.

Name	Date modified	Size
 configuration	2014/10/10 11:14	
 config.tar.gz	2014/10/10 11:14	9 KB

The content of configuration file listed as below,

Name	Date modified	Type	Size
 Calllist	2014/10/10 11:14	File folder	
 <b>Contacts</b>	2014/10/10 11:14	File folder	
 DialRule	2014/10/10 11:14	File folder	
 Features	2014/10/10 11:14	File folder	
 Network	2014/10/10 11:14	File folder	
 Phone	2014/10/10 11:14	File folder	
 Setting	2014/10/10 11:14	File folder	
 voip	2014/10/10 11:14	File folder	

### 5.4.2. Import configuration file

Click the button "Choose file" to select the target file for importing, and then click the button "Import". The phone will be rebooted a couple of minutes later, and import successfully.

Note: If some part of the configuration file has been modified manually, it must be re-compressed as the format of "tar.gz" in Linux

## 5.5. Export System log

When the phone doesn't working well, System log is the best assistant tools for troubleshooting, all operation details has been recorded. This operation is available via Web only.

**Export System Log**

Log Location  Local  Server i

Server Name

Log Level

Item	Description
<b>Log Location</b>	You can import the system log to local PC or remote Server.
<b>Server Name</b>	User must fill the address of server if you choose to export the system log to remote server.
<b>Log Level</b>	It defines the detail of system log as 5 different levels, Fatal, Error, Warning, Info, and Debug. The Debug level is the most detailed.

## 5.6. Dial plan

The customized Dial Plan are available , for example , the rule of replacement, Instant Calling, Area code, Restriction of Outbound.


Before customizing the dial plan, user must learn the basic grammar as below,

.	Represent a character or multiple ones, e.g., "6." can match "66","678","6plus" and so on
x	Represent one character, e.g., "6x" can match "61","62", " 6s" and so on
[ ]	Represent a character in one range, e.g., " 83[0-5]18618"can match"83018618","83488618" and so on
( )	Represent the combination of characters, e.g., "([1-9])([2-7])3" can match "923","153","773" and so on
\$	Add a number after the character "\$" to define the location of the characters, e.g., use the prefix " 8([1-3])(.)" to replace "7\$2", the phone will call "7837" after dialing out "82837"

Note: Any operations (add, modify or delete) on the current dial plan will be not effective until click "Save".

### 5.6.1. Replace Rule

Dial plan "Replace Rule" means to replace a batch of complicated character string by some simple characters, to make a speed dial.

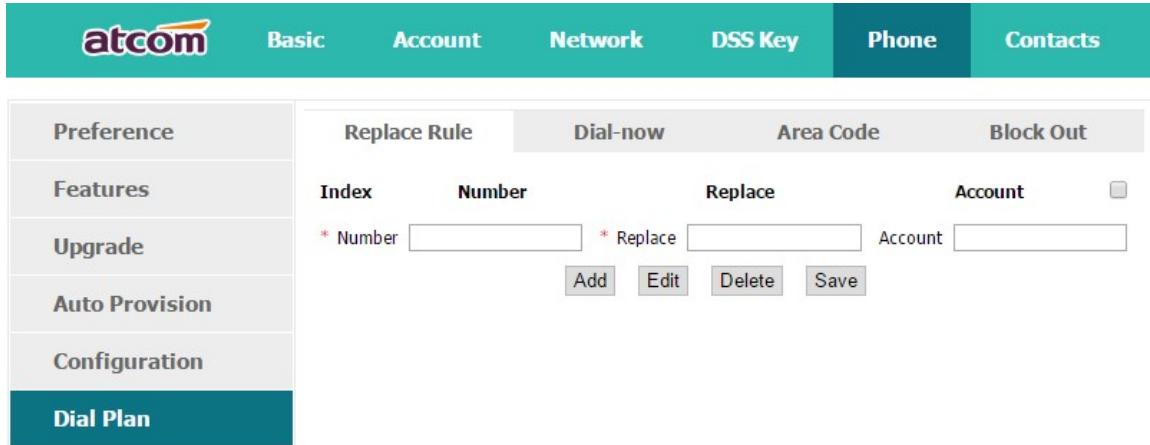


Item	Description	Sample
<b>Number</b>	The string works as replacer, not null	Set Number as "6", Set Replace as"6032", Set Account as "1". It means when dial 6, the phone will dial 6032.
<b>Replace</b>	The string that to be replaced, not null	
<b>Account</b>	The account to apply this dial plan, blank or 1~4 is valid.	
<b>Add</b>	Multiply replace rules can be configured in one phone, after one replace dial plan configured, click this button to add a new one	
<b>Edit</b>	The existed replace dial plans are editable. The specified dial plan should be selected until it is covered with orange and the input fields "Number" and "Replace" shows the details correctly. After modifying, click button "Edit" to make it to be effect	
<b>Delete</b>	Delete one added or saved replace dial plan or multiple ones, click the frame after the specified replace dial plan before delete it, and then click button "Delete"	

<b>Save</b>	Any alteration won't take effect until the button "Save" is clicked.	
-------------	--	--

### 5.6.2. Dial-now

Dial plan "Dial-now" permits the corresponding phone to be dialed instantly without pressing the soft key "Dial", once the input has been matched. It works like a hotline.

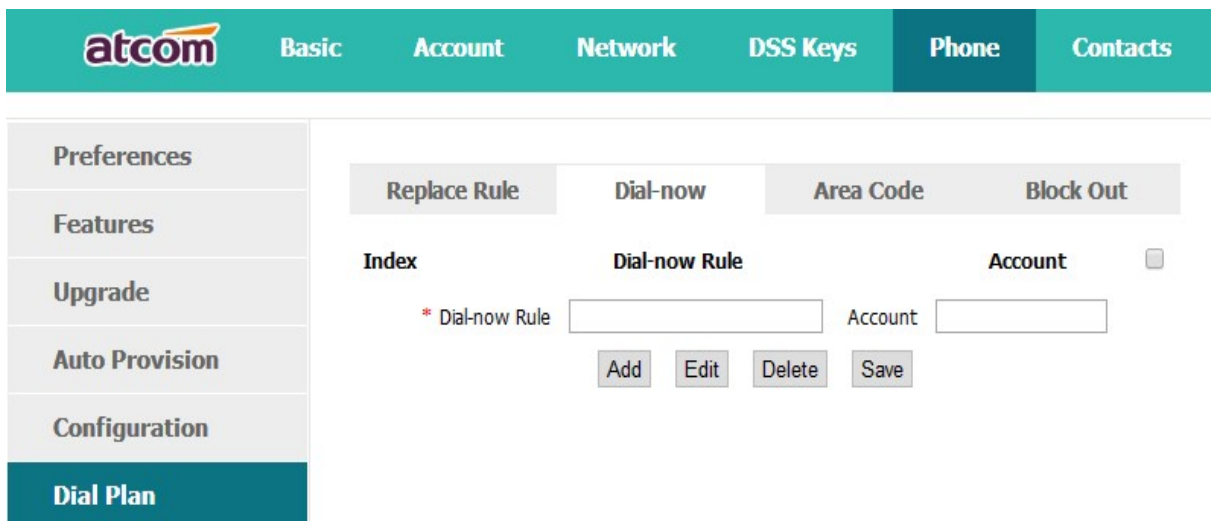


Item	Description	Sample
<b>Dial-now Rule</b>	The string to be dialed out automatically by the phone	Set "Dial-now Rule" as 6xxx, keep "Account" as null
<b>Account</b>	The account to apply this dial plan, blank or 1~4 is valid.	It means the phone will use the 1st available account to call 6033 after "Dial-now Time-out" seconds when inputting four figures begin with 6
<b>Add</b>	Multiply dial-now rules can be configured in one phone, after one dial-now dial plan configured, click this button to add a new one	
<b>Edit</b>	The existed dial-now dial plans are editable. The specified dial plan should be selected until it is covered with orange and the input fields "Number" and "Dial-now" shows the details correctly. After modifying, click button "Edit" to make it to be effect	Note: Dial-now rule is different with hotline. The Dial-now rule will take effect when input

<b>Delete</b>	Delete one added or saved dial-now dial plan or multiple ones, click the frame after the specified dial-now dial plan before delete it, and then click button "Delete"	numbers matches the dial plan, and hotline takes effect in situation that the phone is in dialing state
<b>Save</b>	Any alteration won't take effect until the button "Save" is clicked.	

Set "Dial-now Time-out" via web: **Phone**→**Features**→**General Information**→**Dial-now Time-out (secs)**.

### 5.6.3. Area Code

Dial plan "Area Code" has been defined to identify each different area. To call a phone number of other areas, user must add the area code to be in front of the phone number. For convenience, area code has been recommended to be configured while frequently dialing to that type of phone number.

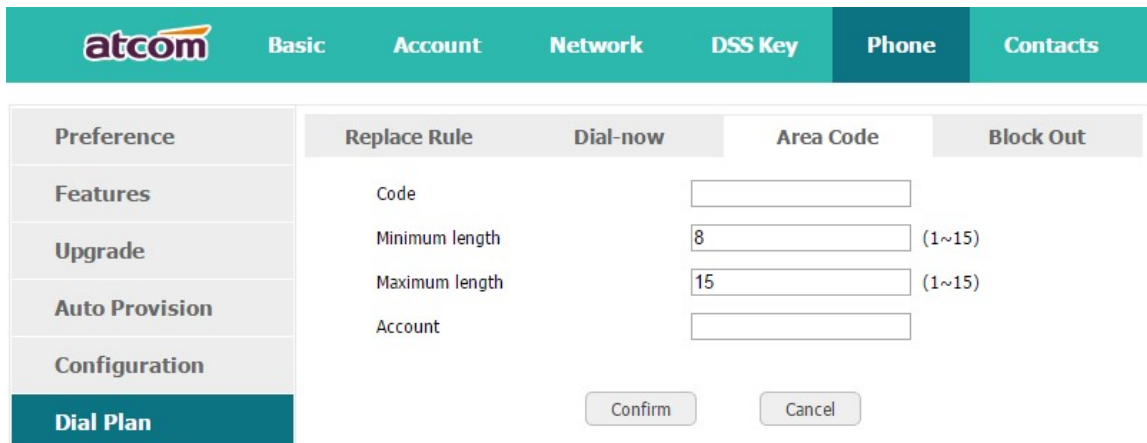

Item	Description	Sample
<b>Code</b>	The area code dialed before the number	Set "Code" as "0086577",
<b>Minimum length</b>	The minimum length of the number input to activate the area code dial plan	Set "Minimum length" as "5".
<b>MD2SW(w)imum length</b>	The mD2SW(w)imum length of the number input to activate the area code dial plan	It means when dialing 83018618 with the 5 <sup>th</sup> account, the phone will dial 0086577 before it.
<b>Account</b>	The account to apply this dial plan, blank or 1 is valid.	Note: If the length of the number input in the dial UI

<b>Confirm</b>	Apply this dial plan	is not between minimum length and the mD2SW(w)imum length, area code will not take effect
<b>Cancel</b>	Recover all input fields to the state that saved at latest time	

### 5.6.4. Block Out

Dial plan "Block out" is used to prohibit the phone number outgoing call from some accounts.

Item	Description	Sample
<b>Block Out Number</b>	The number that prohibited	Set "Block Out Number 1" as "10086"  It means the phone will enter the "Call End" UI when dial "10086"
<b>Account</b>	The account to apply this dial plan, blank or 1	
<b>Confirm</b>	Apply this dial plan	
<b>Cancel</b>	Recover all input fields to the state that saved at latest time	




## 6. WI-FI

### 6.1. Configure the WIFI on the phone

1. Press “**Menu**”→“**WIFI Settings**”→“**Switch**”, open the WIFI connection mode.
2. Please move the navigation key to check the WIFI you want to connect, Press “**Connect**”, then input the correct WiFi password.
3. Return to the standby interface, and phone successful connected to the wifi.
4. The last option is Manual setting, press ‘Enter’, then input the SSID and password.

### 6.2. Configure the WIFI on the WEB

connect to network via Wi-Fi acquiescently, click “**Search Wi-Fi**” button to search the available Wi-Fi.

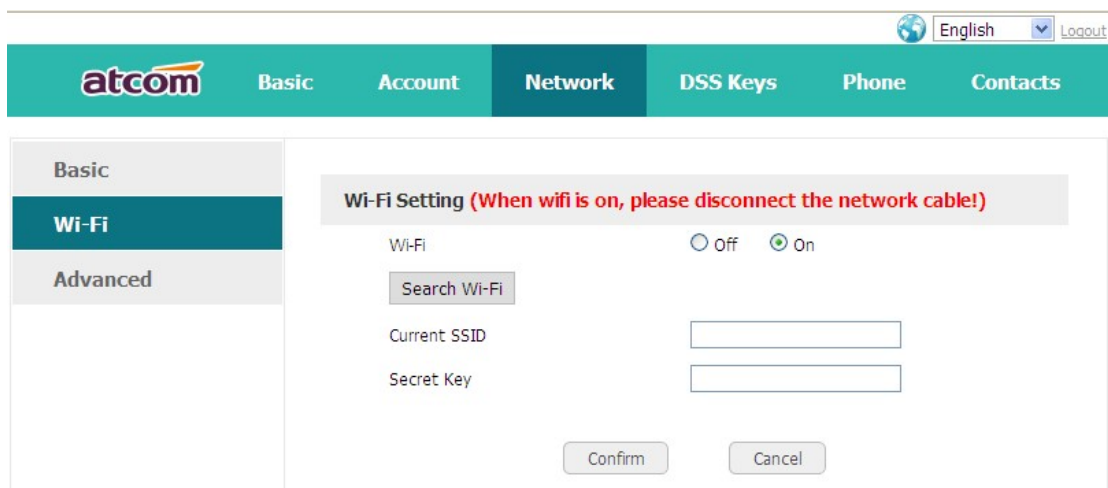



The screenshot shows the ATCOM web interface for configuring Wi-Fi settings. The top navigation bar includes the ATCOM logo and menu items: Basic, Account, Network (selected), DSS Keys, Phone, and Contacts. The left sidebar has options for Basic, Wi-Fi (selected), and Advanced. The main content area is titled "Wi-Fi Setting (When wifi is on, please disconnect the network cable!)" and contains the following elements:

- Wi-Fi status:  Off  On
- Search Wi-Fi button
- Current SSID input field
- Secret Key input field
- Confirm and Cancel buttons

After all available Wi-Fi hotspots are list out, click the round behind the available Wi-Fi which you want to connect.

Index	SSID	Signal	Select
1	cisco	211	<input type="radio"/>
2	360	207	<input type="radio"/>
3	re	207	<input type="radio"/>
4	amoji	205	<input type="radio"/>
5	CHINA TELECOM	205	<input type="radio"/>
6	360_____WIFI-C9	197	<input type="radio"/>
7	_____	197	<input type="radio"/>
8	_____	190	<input type="radio"/>
9	inWatch3	189	<input type="radio"/>
10	ChinaNet-7A6t	188	<input type="radio"/>
11	360_____WIFI-9F	185	<input type="radio"/>
12	iTV-7A6t	185	<input type="radio"/>
13	inWatch2	185	<input type="radio"/>
14	Royale International China	184	<input type="radio"/>

Input the right "Secret Key" and then click the "Confirm" button, the phone will reboot, after rebooting, the Wi-Fi icon will display on the home screen, it means connect failed when the icon come with , then you should check the configuration. if the icon come with , it means connect successfully.

### 6.3. Enterprise WiFi

It supports WPA/WPA2 Enterprise wifi , it is based on Radius sever and configuration the Enterprise wifi in the router.

Configure the Enterprise wifi:

1. Upload the Certificates

Via the webpage: "Phone"→"Trusted Certificates"

Index	Issued To	Issued By	Expiration	Delete
0				<input type="checkbox"/>

**Import Trusted Certificates**

Load trusted certificates file

## 2. Input the WIFI account info

Via the webpage: "**Phone**"→"**Network**"→ "**WIFI**"

Press the "Search WIFI", and select the SSID, then input the radius ID and password.

Via the phone:

Press "**Menu**"→"**WIFI Settings**", and select the SSID , then input the radius ID and password.

# 7. FAQ

## 7.1. How to reset to factory

There are 3 methods for factory reset:

### 1. Factory reset via phone:

- a) Press the **Menu** sofykey.
- b) Select "Settings", then press the soft key "Enter"
- c) Select "Advanced Settings", then press the soft key"Enter"
- d) Input the access password, then press the soft key"Enter"
- e) Select "Reset to factory", then press the soft key"Enter"
- f) Press the soft key"OK", then the phone will be reboot and resumed to factory default settings

### 2. Factory reset via Web:

- a) Key in the IP address of phone with a browser,
- b) Access the webpage of phone as the role of "admin", username/password is admin/admin.
- c) Select"Phone"
- d) Select"Upgrade"

- e) Click the button "Reset to Factory"
  - f) Click the button "OK"
3. Factory reset during starting:
- a) Hold the key "\*" and "#" while power on for 5 seconds
  - b) The phone will be reboot and resumed to factory default setting

## 7.2. Upgrade the firmware on safe mode

If the phone can't be started successfully, user is able to upgrade the firmware on post mode,

- a) Setup a TFTP Server and set the PC's IP address as "192.168.1.200"
- b) Copy the kernel file we supplied to the root menu of TFTP Server
- c) Ensure the TFTP Server and phone are connected to the same network switch and both reachable
- d) Long Press the key "\*" and "1" to upgrade the kernel file, and then plug in power until upgrading information displayed on LCD
- e) The phone will start downloading file from TFTP server
- f) After downloading completed, the phone will be automatically upgraded
- g) After upgrading completed, the phone will be started with the factory default settings

## 7.3. How to make IP Peer to Peer call

1. Press it in dialing status
2. To make a IP peer to peer call

Switch the input type to '1a', then press '\*' key to choose '.'. For example, to dial "192.168.1.100":


1. Change to '1a' input method;

2. input "192", "\*", "168", "\*", "1", "\*", "100"







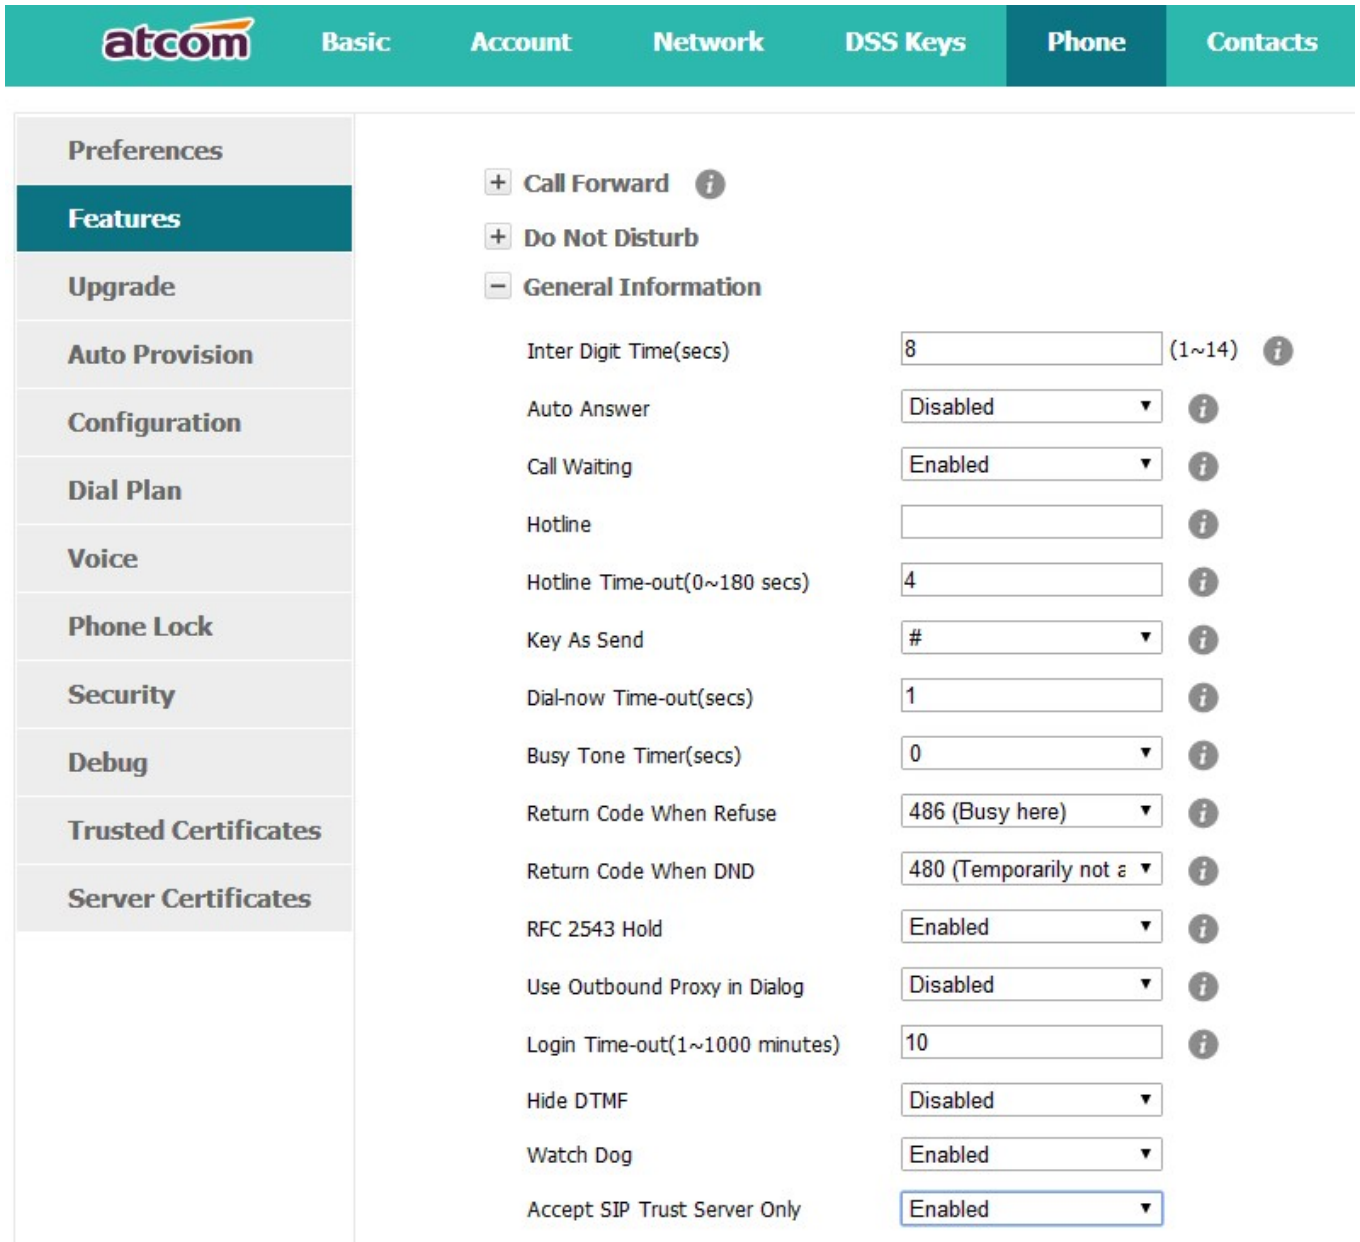









3. Disable the IP call feature

Via webpage modify the make IP call feature:

**Phone→Feature →Accept SIP Trust Server Only, press "Enable".**



The screenshot shows the atcom web interface with the 'Phone' tab selected. The left sidebar contains a menu with 'Features' highlighted. The main content area shows the 'General Information' section expanded, listing various settings:

Setting	Value	Info
Inter Digit Time(secs)	8	(1~14) 
Auto Answer	Disabled	
Call Waiting	Enabled	
Hotline		
Hotline Time-out(0~180 secs)	4	
Key As Send	#	
Dial-now Time-out(secs)	1	
Busy Tone Timer(secs)	0	
Return Code When Refuse	486 (Busy here)	
Return Code When DND	480 (Temporarily not a	
RFC 2543 Hold	Enabled	
Use Outbound Proxy in Dialog	Disabled	
Login Time-out(1~1000 minutes)	10	
Hide DTMF	Disabled	
Watch Dog	Enabled	
Accept SIP Trust Server Only	Enabled	

## 8. Trouble shooting

### 8.1. The phone is failed to register to SIP server

1. First of all, check the IP address. If the LAN port is DHCP, please ensure the DHCP server has been enabled.
2. Check the network gateway
3. Check the DNS
4. Make sure the input account matched the one provided by Service Provider
5. Make sure SIP Server has been enabled already
6. Make sure the Port of SIP Server, it's 5060 by default

### 8.2. The phone is failed to gain IP address

1. Make sure the network cable has been plugged into the LAN port
2. Make sure the network cable or port of network switch are working fine,
3. Make sure the DHCP server has been enabled, and there are available IP address
4. Try to set the LAN port as Statics IP

### 8.3. Only one party can hear from another on calling

1. Try to make a IP peer to peer call, to make sure the mic and speaker are working fine
2. Enable STUN via Web
3. Set the address of STUN Server, for example [stun.sipgate.com](http://stun.sipgate.com)
4. Present this operation above and the phone will be reboot
5. Try to make a normal call again

## 9. Abbreviation

DND: Do Not Disturb

CFWD: Call Forward

Bxfer: Blind Transfer

Conf: Conference

Num: Number

SIP: Session Initiate Protocol

RTP: Real-time Transport Protocol

SDP: Session Description Protocol

VPN: Virtual Private Network

VLAN: Virtual Local Area Network

QoS: Quality of Service

Syslog: System log

UDP: User Data Protocol

TCP: Transmission Control Protocol

TLS: Transport Layer Security Protocol

BLF: Busy Lamp Field

DNS: Domain Name System

SRTP: Secure Real-time Transport Protocol

NTP: Network Time Protocol

VAD: Voice Activity Detection

CNG: Comfort Noise Generator

## 10. FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) The device may not cause harmful interference, (2) the device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.